

# ExCam<sup>®</sup> IPQ1715

---

## User Manual



## Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
<b>2</b>	<b>Technical data .....</b>	<b>4</b>
2.1	Explosion protection .....	4
2.2	Illustration of the model key.....	5
2.3	Electrical parameters of the camera.....	6
2.4	Connection cable Ex-d - Ex-e.....	6
2.4.1	Connection cable for models -L- (SKD02-T/ASKD02-T).....	6
2.4.2	Connection cable for models -LL- with heater (SKDP03-T/ASKDP03-T).....	7
2.4.3	Connection cable for model with flexible cable (SKD04-T.flex).....	8
2.4.4	Connection cable for model with cool.Jacket (SKD05-HT) .....	9
2.5	Video-technical characteristics .....	9
2.6	Other technical data .....	9
<b>3</b>	<b>Safety Instructions .....</b>	<b>10</b>
<b>4</b>	<b>Installation .....</b>	<b>11</b>
<b>5</b>	<b>Electrical connection .....</b>	<b>13</b>
5.1	Potential equalization .....	13
5.2	Connection work at the device (terminal box) and fuse protection .....	14
5.3	External connection and protection .....	20
5.3.1	Direct routing from the ExTB-3 into the safe area .....	20
5.3.2	Routing via ExConnection Rail (optional accessories).....	21
5.3.3	Appropriate cables & cable entries .....	22
5.3.4	Fusing .....	23
5.3.5	Plug assignment (RJ45) .....	24
5.3.6	Tests prior to switching on voltage .....	25
<b>6</b>	<b>Working inside the camera housing (Ex-d).....</b>	<b>26</b>
6.1	Work preparation.....	26
6.2	Opening the pressure-resistant housing.....	26
6.3	Removing/inserting an SD memory card .....	28
6.4	Hardware Reset .....	29
6.5	Closing the pressure-resistant housing .....	30
6.6	Battery.....	30
<b>7</b>	<b>Network access and visualization .....</b>	<b>31</b>
7.1	Browser Support.....	31
7.2	Assigning the IP address.....	31
7.3	Password/ Identification .....	32
<b>8</b>	<b>Maintenance/ Modification.....</b>	<b>33</b>
8.1	Repair and correction .....	33
<b>9</b>	<b>Disposal/ Recycling .....</b>	<b>33</b>
<b>10</b>	<b>Drawings &amp; 3D models, Certificates and further documentation .....</b>	<b>34</b>
<b>11</b>	<b>Notes.....</b>	<b>35</b>

## Table of Figures and Charts

Tab.2-1 – Model key .....	5
Fig. 2-1 Sectional view of SKD02-T .....	6
Fig. 2-2 Sectional view of ASKD02-T .....	7
Fig. 2-3 Sectional view of SKDP03-T .....	7
Fig. 2-4 Sectional view of ASKDP03-T .....	8
Fig. 2-5 Sectional view of SKD04-T.flex .....	8
Fig. 2-6 Sectional view of SKD05-HT .....	9
Tab. 2-2 Other technical data .....	9
Tab. 4-1 Mounting Accessories .....	12
Fig. 5-1 ExCam IPQ1715 potential equalization .....	13
Tab. 5-1 Equipotential Bonding .....	14
Fig. 5-2 – ExCam IPQ1715 T08-VA2.2.K1.BOR-LL.H-xxx.N- <b>T</b> .....	14
Fig. 5-3 – ExCam IPQ1715 T08-VA2.2.K1.BOR-LL.H-xxx.N- <b>P</b> .....	14
Fig. 5-4 Video Tutorial ExTB-3: Screw on the terminal box ExTB-3 .....	15
Tab. 5-2 Wire assignment of terminal box ExTB (model L) .....	15
Tab. 5-3 Wire assignment of terminal box ExTB (model L/ASKD02-T) .....	16
Tab. 5-4 Wire assignment of terminal box ExTB (model LL) .....	16
Tab. 5-5 Wire assignment of terminal box ExTB (model LL/ASKDP03-T) .....	17
Fig. 5-5 Sample circuit of terminal box ExTB (model L) .....	17
Fig. 5-6 Sample circuit of terminal box ExTB (model LL) .....	18
Fig. 5-7 Photo of the occupied terminal box ExTB-3 .....	18
Table 5-6. Wire assignment of terminal box ExTB (with flex cable) .....	19
Table 5-6. Wire assignment of terminal box ExTB (with cool.Jacket) .....	19
Fig 5-8 ExTB-3 -> Safe area .....	20
Fig. 5-9 ExTB-3 -> ExConnection Rail .....	21
Figure 5-10 Ex-d cable selection .....	22
Fig. 5-11 Barrier gland .....	23
Tab. 5-7 Recommendation for fusing .....	24
Fig. 5-12 Plug assignment, RJ45 .....	25
Fig. 6-1 Removing the weather protection roof (1/2) (this illustration is an example) .....	27
Fig. 6-2 Removing the weather protection roof (2/2) (similar illustration) .....	27
Fig. 6-3 Opening the ExCam IPQ1715 (similar illustration) .....	27
Fig. 6-4 Reset Button .....	29
Fig. 7-1 Axis IP Utility .....	32

## History of revisions

Product: ExCam® IPQ1715  
 Title: User Manual for ExCam® IPQ1715  
 Doc. -Id. 220601-PT08BA-ES-ExCam IPQ1715\_en\_rev.03.docx  
 Author: Eva Schneider, Grad. Eng. (UAS)  
 Created on: 01.06.2022

Rev. Index	Date	Name	Comment	Approved by the ATEX Supervisor
0	01.06.2022	E. Schneider	Compilation of the document	
1	23.01.2023	E. Schneider	Change of EAC-Ex Certificate	
2	12.03.2025	E. Schneider	Supplement models with flexible cable	
3	07.05.2025	E. Schneider	Supplement models with armored cable and heater	

# 1 Introduction

The ExCam IPQ1715 is a powerful IP motor-zoom camera. The camera is certified according to ATEX, IECEx, as well as EAC-Ex. It has a high-definition television resolution (1920x1080) and is equipped with a powerful motor-zoom autofocus lens (21x optical zoom) and a Deep Learning Processor Unit (DLPU).

The ExCam series is certified both, in accordance with the European (ATEX) and international directive (IECEx). The explosion-protected housing is approved for ATEX group II for zones 1, 2, 21 and 22 including the explosion groups IIC / IIIC. To see other approvals, please visit our website at [www.samcon.eu](http://www.samcon.eu)




When designing the ExCam IPQ1715, we attached a very high importance to safety, mechanical precision and high quality of stainless steel.

## 2 Technical data

### 2.1 Explosion protection

Identification marks

acc. to Directive 2014/34/EU:

 II 2G (zone 1 and 2)  
 II 2D (zone 21 and 22)  
 I M2 <sup>1</sup>

Explosion protection (gas):

Ex db IIB T6 Gb<sup>2</sup>

Explosion protection (dust):

Ex tb IIIC T80°C Db

Explosion protection (mining):

Ex db I Mb

Protection class:

IP 66/68 (IEC /EN 60529)

Transport/storage temperature:

-40°C...+65°C

Ambient temperature (EX):

-40°C...+50°C (Type...L.N...)

-60°C...+50°C (Type...LL.H...)

-40°C...+120°C (Type...L.HH...)

Nominated body:

TÜV Rheinland (number 0035)

EU type approval certificate:

TÜV 18 ATEX 8218X (2018)

IECEx Certificate of Conformity:

TUR 18.0023X (2018)

INMETRO-Certificate:

TÜV 23.0363X (2023)

EAC-Ex TUR Report:

TC RU C-DE.HA65.B.01652/22

Other certificates:

see <https://www.samcon.eu/en/products/network/excam-ipq1715>

<sup>1</sup> Certification for mining only for models with armoured cable and plug termination.

<sup>2</sup> The temperature class depends on model. For models ...-LL.H-... the temperature class has to be reduced to T4; for models ...-L.HH-... to T3.



**Attention!**  
**The instructions stated on the type plates have to be observed!**

## 2.2 Illustration of the model key

1) Ex product- name	2) Type	3) Housing- combination	4) Temp.- range	5) Cable length [m]	6) Cable termin.	Product number Link to digital Type plate
ExCam IPQ1715	T08-	VA2.2.K1.BOR-	L.N-	005.N-	P-	<a href="#">22070401</a>
	T08-	VA2.2.K1.BOR-	L.N-	005.A-	P-	<a href="#">22070504</a>
	T08-	VA2.2.K1.BOR-	L.N-	005.N-	T-	<a href="#">22070406</a>
	T08-	VA2.2.K1.BOR-	L.N-	005.A-	T-	<a href="#">22070488</a>
	T08-	VA2.2.K1.BOR-	LL.H-	005.N-	P-	<a href="#">22070409</a>
	T08-	VA2.2.K1.BOR-	LL.H-	005.A-	P-	
	T08-	VA2.2.K1.BOR-	LL.H-	005.N-	T-	<a href="#">22070431</a>
	T08-	VA2.2.K1.BOR-	LL.H-	005.A-	T-	
	T08-	VA2.2.K1.BOR-	L.N-	005.F-	P-	<a href="#">22070592</a>
	T08-	VA2.2.K1.BOR-	L.N-	005.F-	T-	<a href="#">22070593</a>
	T08-	VA2.2.K1.BOR-	LL.H-	005.A-	P-	<a href="#">22070597</a>
	T08-	VA2.2.K1.BOR-	L.HH-	010.N-	T-	

Tab.2-1 – Model key

### Explanations:

- 1) **ExCam IPQ1715 =** Functional camera description of the ExCam Series (technical data/  
specification of the individual camera module)
  
- 2) **T08 =** SAMCON Production- Type 08
  
- 3) **VA2.2.K1.BOR =** T07 ex d housing (stainless steel 1.4404) with large diameter  
 $\varnothing_{VA2}=113\text{mm}$   
**VA2.2.K1.BOR =** T07 VA2.2 housing with medium body length ( $L_R = 262\text{mm}$ )  
**VA2.2.K1.BOR =** K1 cable gland flange  
**VA2.2.K1.BOR =** Borosilicate sight glass DIN7080 (standard, for video cameras within visible  
 spectral range:  $\lambda = 350\dots2000$  [nm] and photografical infrared range (NIR),  
 not suitable for thermographic applications (MIR/ FIR), for cameras without  
 wiper
  
- 4) **L.N =** Low ambient temperature range, no heater installed  
 ( $T_{amb} > -40^\circ\text{C}$ )  
**L.N=** Normal temperature ( $T_{amb} < +50^\circ\text{C}$ )  
**LL.H=** PTC heaterfor arctic temperatures installed ( $T_{amb} > -60^\circ\text{C}$ )  
**LL.H=** Battery removed ( $T_{amb} < +50^\circ\text{C}$ )
  
- 5) **005.N =** Length of the connection line in meter at delivery; 5m is the  
 standard cable length, max. cable length is: 001...95 [m] for  
 modelkey -N- and -L-and 001...005 [m] for model key –LL-  
**005.N =** Non armoured cable  
**005.A =** Armoured cable  
**005.F =** Flexible cable (drag chain suitable, **not** longitudinally tight)

- 6) **P =** Plug- termination (*standard*)  
 CAT6, RJ-45 network plug (heavy duty), AWG 26-22,  
 contact assignment acc. To specification EIA/TIA-568B
- T =** Terminal Box termination (optional)  
 4 x PoE Mode A connection (camera PoE)  
 24VDC (Heater) (see chapter electrical connection)

## 2.3 Electrical parameters of the camera

### Supply of 24 V DC for the heating:

Voltage supply: 22 V DC <  $U_{in}$  < 26 V DC  
 Power consumption: approx. 40W@-60°C (depends on temperature)

### Power supply of the camera via Ethernet (PoE):

Voltage supply: PoE, IEEE 802.3af/802.3at type 2 class 4  
 Reference voltage: +48 V DC (44...54 V DC)  
 Maximum power consumption: 13.5 W  
 Typical power consumption: 12.0 W

## 2.4 Connection cable Ex-d - Ex-e

Description: Data transfer and power supply of the camera  
 module (compliant with DIN EN 60079-14)  
 Jacket colour: green (GN), similar to RAL3001

### 2.4.1 Connection cable for models -L- (SKD02-T/ASKD02-T)

#### Systemcable SKD02-T:

Outside diameter: 8.9 ± 0.3 mm  
 Bending radius: 8 x  $D_a$  when installed and 4 x  $D_a$  after relocation  
 Data line: 4 x 2 x AWG23/1 CAT.6  
 Properties: PUR halogen-free, flame-retardant, UV-re-  
 sistant, chemical resistance, shielded

Quick link:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD02-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD02-T_Datasheet.pdf)

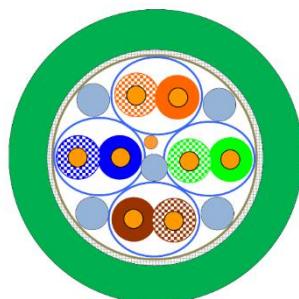


Fig. 2-1 Sectional view of SKD02-T

**Systemcable ASKD02-T:**

Outside diameter:	13.20 ± 0.3 mm
Bending radius:	8 x D <sub>a</sub> when installed and 4 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG22-23/1 CAT.6
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded (see <a href="http://www.samcon.eu">www.samcon.eu</a> )

## Quicklink:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T_Datasheet.pdf)

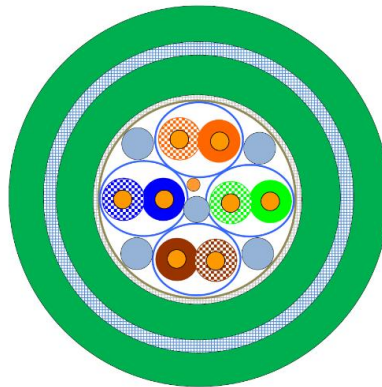


Fig. 2-2 Sectional view of ASKD02-T

**2.4.2 Connection cable for models –LL- with heater (SKDP03-T/ASKDP03-T)**
**Systemcable SKDP03-T:**

Outside diameter:	12.40 ± 0.3 mm
Bending radius:	8 x D <sub>a</sub> when installed and 4 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG23/1 CAT.6
Performance elements:	3G1.5 (BK-BU-GN/YE)
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded

## Quick link:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKDP03-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKDP03-T_Datasheet.pdf)

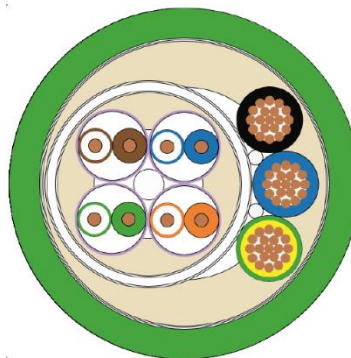


Fig. 2-3 Sectional view of SKDP03-T

**Systemcable ASKDP03-T:**

Outside diameter:	15.50 ± 0.6 mm
Bending radius:	15x D <sub>a</sub> installed and 10x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG23/1 CAT.6
Performance elements:	3G1.5 (BK-BU-GN/YE)
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded

## Quicklink:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKDP03-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKDP03-T_Datasheet.pdf)

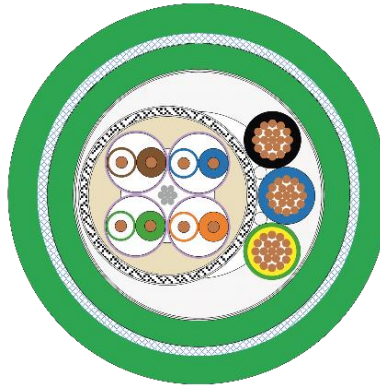


Fig. 2-4 Sectional view of ASKDP03-T

**2.4.3 Connection cable for model with flexible cable (SKD04-T.flex)**

Description:	Data transfer and power supply of the camera module (compliant with DIN EN 60079-14)
Jacket colour:	green (GN)

**Systemcable SKD04-T.flex:**

Outside diameter:	8.7 ± 0.3 mm
Bending radius:	8 x D <sub>a</sub> when installed and 4 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG24/7 CAT.6
Properties:	PUR, flame-retardant, UV-resistant, chemical resistance, drag chain suitable

## Quicklink:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD04-T.flex\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD04-T.flex_Datasheet.pdf)

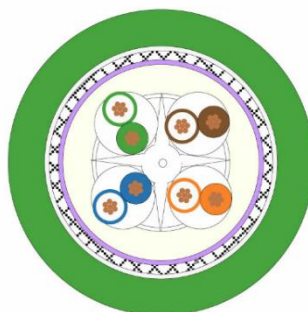


Fig. 2-5 Sectional view of SKD04-T.flex


**Attention!**

**Not longitudinal tight. Take measures against zone displacement.**



#### 2.4.4 Connection cable for model with cool.Jacket (SKD05-HT)

Description: Data transfer and power supply of the camera module (compliant with DIN EN 60079-14)  
 Jacket colour: Grey (GY)

##### Systemcable SKD05-HT:

Outside diameter: 6.60 ± 0.2 mm  
 Bending radius: 8 x D<sub>a</sub> when installed and 4 x D<sub>a</sub> after relocation  
 Data line: 4 x 2 x AWG26/7 CAT.6  
 Properties: FEP, flame-retardant, UV-resistant, chemical resistance, for extreme hot temperatures

Quick link:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD05-HT\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD05-HT_Datasheet.pdf)

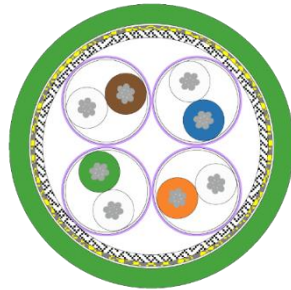


Fig. 2-6 Sectional view of SKD05-HT

## 2.5 Video-technical characteristics

We use the AXIS Q1715 Network Camera in a pressure-resistant enclosure. For details, please refer to the Product Documentation, video-technical data of AXIS®:

<https://www.axis.com/products/axis-q1715>



## 2.6 Other technical data

	Camera (Ex-d)	Terminal box (Ex-e)
Permissible ambient temperature	-40°C ... +50°C (for PoE power supply) -60°C ... +50°C (in the event of additional 24 V DC power supply)	-60°C ... +55°C
Protection class as per EN 60529/IEC 529	IP66/68 (Test conditions: 24h/3m water column 5°C°)	IP66
Housing material	stainless steel, mat. no. 1.4404	polyester resin
Weight	about 6 kg	about 1 kg
Dimensions	D113mm x 262mm	145mm x 145mm x 71mm

Tab. 2-2 Other technical data

### 3 Safety Instructions

Please absolutely observe the safety directions stated in the Ex-installation instructions of the T08 ExCam series!



Quick link:

<https://www.samcon.eu/fileadmin/documents/en/20-Ex-Cameras-Analog/ExCam-Series-T08-EX-Installation-Manual-2020.pdf>

**It is absolutely mandatory to observe the national safety regulations and regulations for prevention of accidents, as well as the safety instructions given below in this User Manual!**



**Attention!**

Cameras of the type T08 ExCam are not suitable for use in zone 0 and zone 20. The ambient temperature, temperature class and explosion group as stated on type plate must be observed! Alterations are not permitted! The camera is to be operated in sound conditions and in the intended way.



**Attention!**

Only original parts of SAMCON Prozessleittechnik GmbH may be used for repairs. Repairs concerning the explosion protection may only be carried out in accordance with the nationally applied regulations and by SAMCON Prozessleittechnik GmbH.



**Attention!**

Prior to installation, take external sources of heat or cold into account! The temperature ranges prescribed for storage, transport and operation must be adhered to!



**Attention!**

Observe the warnings given on the type plate:

**“WARNING – DO NOT OPEN IN HAZARD AREAS“**



The use in hazardous areas with regard to temperature and dust layers is defined in the respective national regulations.



When installing the ExCam, adhere to the requirements of the EN/IEC 60079-14.

## 4 Installation

For erecting and operating the camera, the relevant national regulations, as well as the generally accepted rules of technology shall prevail. Before mounting the camera, thoroughly check it for any transport damage, especially regarding the housing and the cable. Installation, electrical connection and the commissioning must only be carried out by qualified specialists.

### Work preparation:



**Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**



**Attention!**

**Depending on classification of hazard areas, a work approval has to be obtained.**

**When opening the pressure-resistant enclosure under voltage, it is absolutely necessary to prevent potentially explosive atmosphere!**

To ensure the best image quality delivered by the network camera, plan the installation site carefully (consider light conditions, object distance or size, angle and minimum object distance to the focus).

- Use appropriate tools and aids
- When working, ensure a safe stand.
- Make sure that any static charge is avoided



**Attention!**

**Please adhere to the national security, installation and accident prevention regulations (e.g. DIN EN 60079-14) and the safety instructions in this User Manual, as well as the ones in the Installation Guidelines!**



**Attention!**

**Adhere to the provisions of the IECEx ATEX and EX installation instructions for mounting and commissioning!**

The ExCam® IPQ1715 consists of a flame-proof camera housing (Ex-d) and, optionally (models with a terminal box ...-T), a terminal box of a high degree of safety (Ex-e). Both areas are separated by a reinforced 5 m line. Mount the camera according to the desired field of view. Install the terminal box so that a good accessibility is provided, in order to facilitate electrical connection.



**Attention!**  
 Please pay attention to the national and local regulations for mounting heavy loads. In case of doubt, take appropriate security measures.

Drawings for drilling hole patterns and further information can be viewed on our product page:

Quick link:

<https://www.samcon.eu/en/products/network/excam-ipq1715/>



### Option mounting accessories

Wall bracket WMB-...		<p><b>WALL MOUNT BRACKET WMB-VA2.1/2.2</b>          Wall bracket for devices of T08-VA2.2 series. Suitable for hanging the camera on walls.          Material: stainless steel 1.4404          Load bearing: 25 kg          Dimensions: 80 x 100 x 275 mm</p>
Pole adapter PMB-...		<p><b>POLE MOUNT BRACKET PMB-VA</b>          Pole adapter for VA wall mount          Material: stainless steel 1.4404          Suitable for pole diameters between 50 and 105 mm          Load-bearing capacity: 45 kg          Dimensions: 120 x 180 (x 130 bei Mast Ø 60 mm)</p>
Weather protection roof WPR-...		<p><b>WEATHER PROTECTION ROOF WPR-VA2.2</b>          Weather protection roof for devices of T08-VA2.2-series</p>

Tab. 4-1 Mounting Accessories

## 5 Electrical connection



### Attention!

The electrical connection of the equipment may only be carried out by qualified and skilled personnel!



### Attention!

It is absolutely necessary to ground the ExCam® series housing via the PA connection.



### Attention!

Please observe the national security, installation and accident prevention regulations (e.g. DIN EN 60079-14) and the safety instructions in this User Manual, as well as the ones in the Installation Guidelines!

The delivered ExCam® IPQ1715 is equipped with an electrical connection cable of the type (A)SKD02-T (models with model key -L-) or (A)SKDP03-T (models with model key -LL-). The maximum transmission range from the camera to the next active network interface is 100 meters and can be individually specified by the client. The user is NOT authorised to do electrical connection procedures inside the pressure-resistant enclosure.

### 5.1 Potential equalization

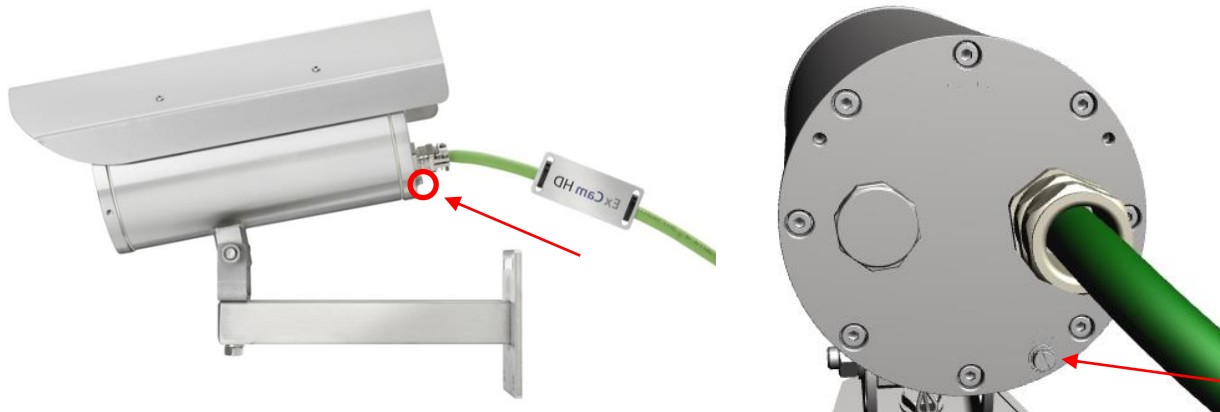


Fig. 5-1 ExCam IPQ1715 potential equalization

The potential equalization/grounding of the camera body is absolutely necessary, in order to avoid static charges and thus the formation of sparks. For this purpose, a screw terminal is provided at the rear side, at the bottom (right) (see Figure 5-1). The cross-section of the equipotential bonding should comply with the National Ground Rules (at least 4 mm<sup>2</sup>).

Wiring table:

Potential	Colour (IEC 60757)	Cross-section	Comment
PA	GN/YE	4 mm <sup>2</sup> (rigid)	Terminal: Slotted screw M4x0.7 (DIN 84) with washer Ø9mm (DIN 125A), Keep 3 Nm tightening torque!

Tab. 5-1 Equipotential Bonding

## 5.2 Connection work at the device (terminal box) and fuse protection

### Supply of 24 V DC for the heating

Power supply:

22 V DC <  $U_{in}$  < 26 V DC

Power consumption:

approx. 40W @ -60°C (depends on the temp.)

### Power supply for the camera (PoE)

Power supply:

PoE, IEEE 802.3af/802.3at type 1 class 3

Reference voltage:

+48 V DC (44...54 V DC)

Maximum power consumption:

13.5 W

Typical power consumption:

12.0 W

The figures 5.2 and 5.3 illustrate the potential cable terminations of the ExCam IPQ1715. Possible terminations are: terminal box or plug.



Fig. 5-2 – ExCam IPQ1715 T08-VA2.2.K1.BOR-LL.H-xxx.N-**I**



Fig. 5-3 – ExCam IPQ1715 T08-VA2.2.K1.BOR-LL.H-xxx.N-**P**



**Attention!**  
**Never open the Ex-e terminal box under voltage!**



**Attention!**  
**Adhere to the international installation regulations for connection chambers with increased safety (Ex-e).**



**Attention!**  
**Adhere to attached separate Usual Manual for the Ex-e terminal box.**

### Video Tutorial:

Please view our video tutorial:

“SAMCON 01 Wiring the cable SKDP03-T to the junction box ExTB-3”  
<https://go.samcon.eu/v01>



Fig. 5-4 Video Tutorial ExTB-3: Screw on the terminal box ExTB-3

The pin assignment of the SKD02-T is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour SKD02-T (IEC60757)	Terminal ExTB	Cross-sectional surface	Comment
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Tab. 5-2 Wire assignment of terminal box ExTB (model L)

The pin assignment of the ASKD02-T is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour ASKD02-T (IEC60757)	Terminal ExTB	Cross-sectional surface	Comment
<b>Reinforcement</b>	<b>YE / GN</b>	<b>PE</b>	<b>2.5 mm<sup>2</sup></b>	<b>Flex</b>
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
<b>GND/SHD</b>	<b>YE / GN</b>	<b>PE</b>	<b>2.5 mm<sup>2</sup></b>	<b>Flex</b>

Tab. 5-3 Wire assignment of terminal box ExTB (model L/ASKD02-T)

The pin assignment of the SKDP03-T is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour SKDP03-T (IEC60757)	Terminal ExTB	Cross-sectional surface	Comment
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
<b>GND/SHD</b>	<b>YE / GN</b>	<b>PE</b>	<b>2.5 mm<sup>2</sup></b>	<b>Flex</b>
L+	BK	9	1.5 mm <sup>2</sup>	L+ 24VDC
L-	BU	10	1.5 mm <sup>2</sup>	L- 24VDC
<b>PE</b>	<b>YE / GN</b>	<b>PE</b>	<b>1.5 mm<sup>2</sup></b>	<b>PE</b>

Tab. 5-4 Wire assignment of terminal box ExTB (model LL)



The pin assignment of the ASKDP03-T is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour ASKDP03-T (IEC60757)	Terminal ExTB	Cross-sectional surface	Comment
<b>Reinforcement</b>	<b>YE / GN</b>	<b>PE</b>	<b>2.5 mm<sup>2</sup></b>	<b>Flex</b>
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
<b>GND/SHD</b>	<b>YE / GN</b>	<b>PE</b>	<b>2.5 mm<sup>2</sup></b>	<b>Flex</b>
L+	BK	9	1.5 mm <sup>2</sup>	L+ 24VDC
L-	BU	10	1.5 mm <sup>2</sup>	L- 24VDC
<b>PE</b>	<b>YE / GN</b>	<b>PE</b>	<b>1.5 mm<sup>2</sup></b>	<b>PE</b>

Tab. 5-5 Wire assignment of terminal box ExTB (model LL/ASKDP03-T)

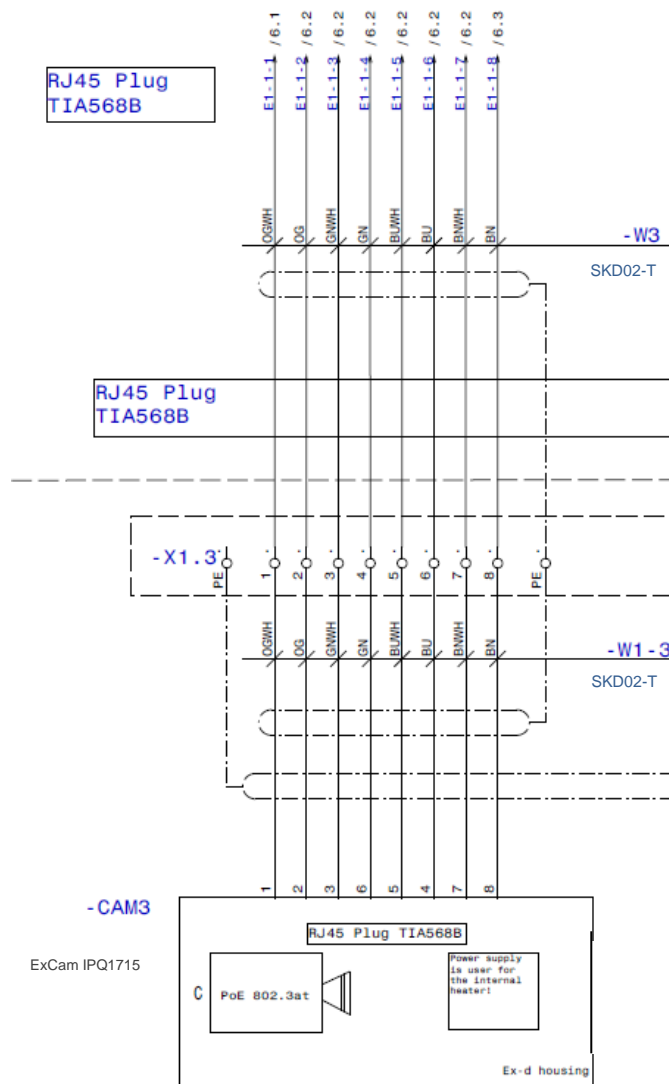


Fig. 5-5 Sample circuit of terminal box ExTB (model L)

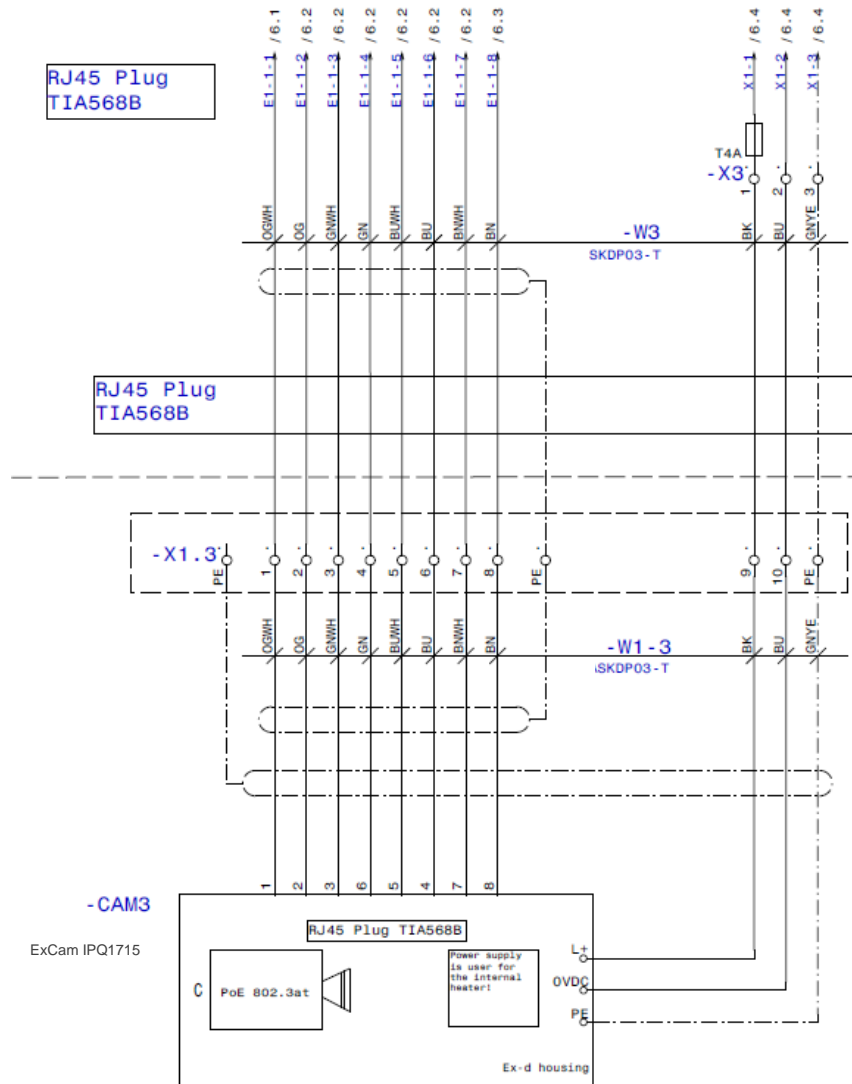


Fig. 5-6 Sample circuit of terminal box ExTB (model LL)

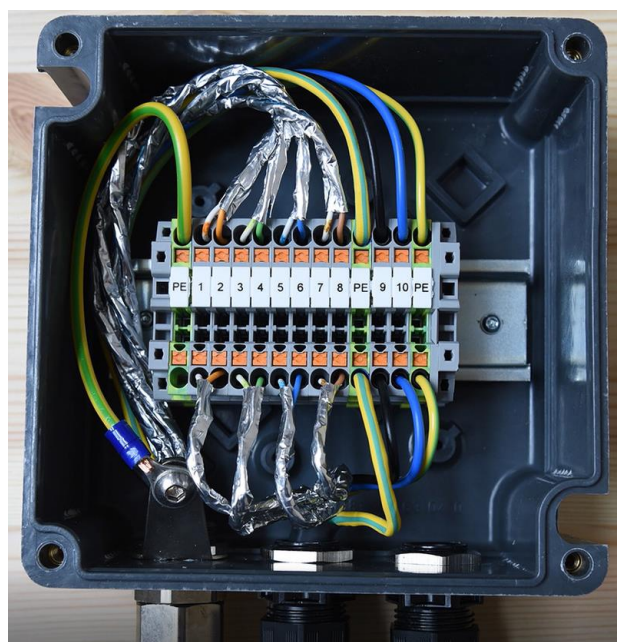


Fig. 5-7 Photo of the occupied terminal box ExTB-3

**Note:**

If the camera is equipped with a Flex-cable (...F...), the wiring is executed via the cable SKD04-T.flex. The pin assignment of the SKD04-T.flex is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour SKD04-T.flex (IEC60757)	Terminal ExTB	Cross-sectional surface	Comment
Tx+	WH / OG	1	0,21 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0,21 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0,21 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0,21 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0,21 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0,21 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0,21 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0,21 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-6. Wire assignment of terminal box ExTB (with flex cable)

**Note:**

If the camera is equipped with a camera cooling system (SAMCON **cool.Jacket** for model key type L.HH), the wiring is executed via the cable SKD05-HT.

The pin assignment of the SKD05-HT is executed in accordance with the standard EIA/TIA-568B for 100BaseTX and 24VDC, as follows:

Camera (Ex-d) (T568B)	Colour SKD05-HT (IEC60757)	Terminal ExTB-3	Cross-sectional surface	Comment
Tx+	WH / OG	1	0.13 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.13 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.13 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.13 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.13 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.13 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.13 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.13 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-6. Wire assignment of terminal box ExTB (with cool.Jacket)

An appropriate water supply has to be provided by the customer. For further information, please refer to the applicable datasheet of the ExCam IPQ1715 cool.Jacket.



**Attention!**

**Introduce the foiling up to about 15 mm to the terminals, in order to prevent alien crosstalk. Make sure that the foiling cannot cause any short circuit of the data pairs!**



**Attention!**

Bring the twisted pair composite approximately 10 mm close to the terminals, in order to ensure the interference immunity.



**Attention!**

Use only terminals approved by SAMCON.



**Attention!**

Finally, check your network installation by per Class-D Link Test.

### 5.3 External connection and protection

There are several options of routing the ExTB-3 terminal box in a safe area:

#### 5.3.1 Direct routing from the ExTB-3 into the safe area

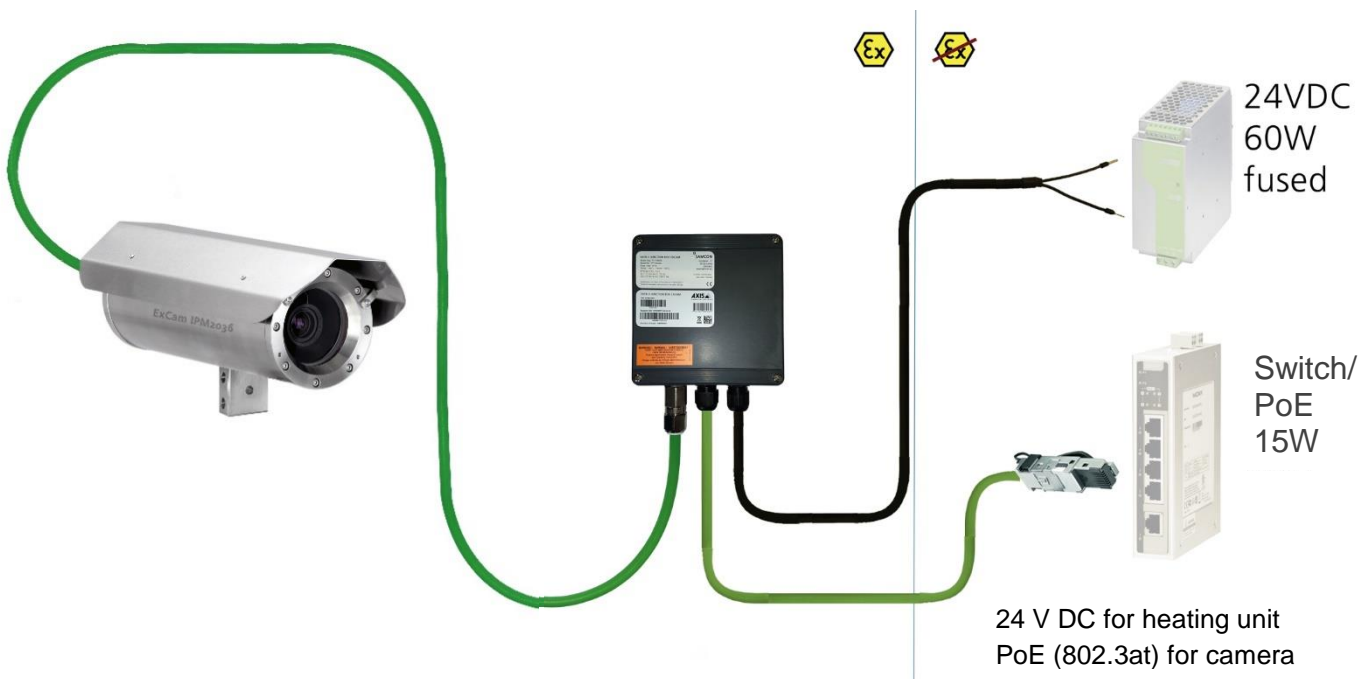


Fig 5-8 ExTB-3 -> Safe area

In case of direct routing from the ExTB-3 into the safe area, the power supply and the voltage signal is led from the safe area to the terminal box. Please observe the terminal box assignment, as described above.



**Attention!**

Cables and wires must comply with the requirements of the IEC 60079-0/1/7 & 14.



**Attention!**  
The supply line must have a sufficient cross-section. The cable protection must comply with national and international regulations.

### 5.3.2 Routing via ExConnection Rail (optional accessories)

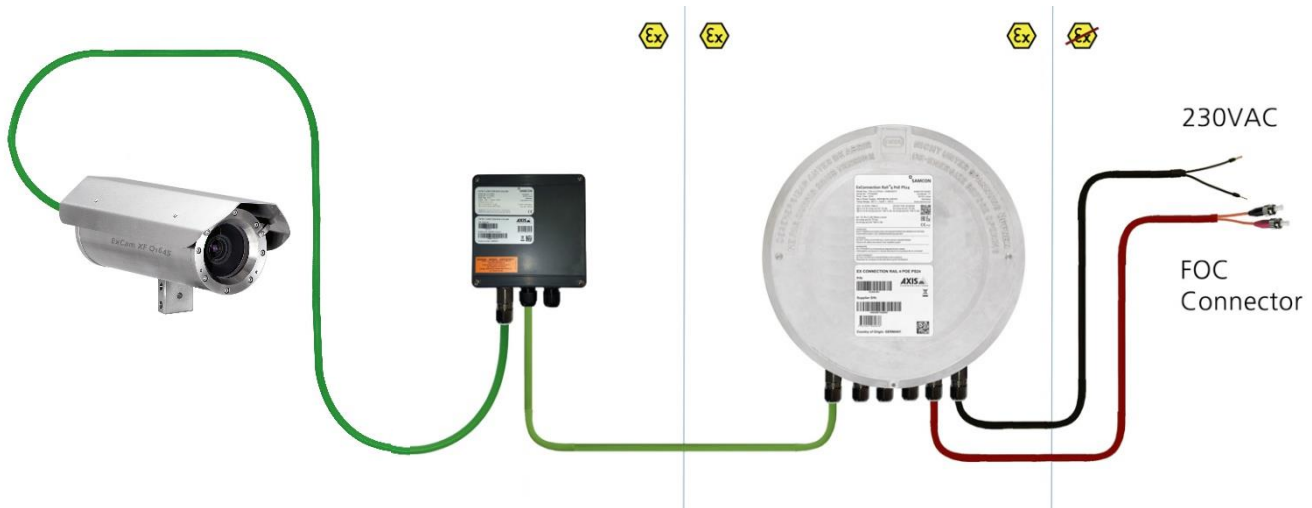


Fig. 5-9 ExTB-3 -> ExConnection Rail

In case of routing the ExTB-3 into an ExConnection Rail, larger installation distances can be covered.

*Note:*

*In hazardous areas, the ExConnection Rail (optional accessories) acts as a PoE+ switch, a media converter from copper to fibre-optic cable, as well as a power supply for the cameras.*



**Attention!**  
Cables and wires must comply with the requirements of the IEC 60079-0/1/7 & 14.



**Attention!**  
The supply line must have a sufficient cross-section. The cable protection must comply with national and international regulations.

### 5.3.3 Appropriate cables & cable entries

An integral part of the device safety is the correct selection of the cables, wires and cable entries.



**Attention!**  
**Cables and wires must comply with the requirements of the IEC 60079-0/1/7 & 14.**



**Attention!**  
**The supply line must have a sufficient cross-section. The cable protection must comply with national and international regulations.**

To view our non-binding configuration and planning guidelines, please visit our website:



Perhaps our video will help you: "Cables for flameproof devices in potentially explosive atmospheres"

<http://go.samcon.eu/video-cable-ex>



Figure 5-10 Ex-d cable selection

Particularly for installations requiring a suitable barrier gland, make sure that you handle them correctly and observe the rules and notes given in the respective mounting and assembly instructions.

We show the basic procedures in the following video tutorial:

**Video Tutorial:**

“SAMCON 02 Mounting and installing Ex-d barrier glands to ExConnection Rails”

<https://go.samcon.eu/v02>



Fig. 5-11 Barrier gland

### 5.3.4 Fusing

PoE power supply requires no fuses.

The power supply fusing depends on the cable cross-section and length.



**Attention!**

The protection recommendation for fusing relates to 40W@24VDC at 100 meters 1.5 mm<sup>2</sup>



**Attention!**

When the heating switches on, there are high current peaks! Use slow-blow fuses.



**Attention!**

Please pay attention to the national and international regulations regarding selectivity and line protection.

Potential/ Wire no.	Colour (IEC60757)	Conductor	Voltage	Maximum power consumption/fusing:
L+ / 1	BK	1.5mm <sup>2</sup> , stranded wire	+24 V DC	40 W of continuous power Fine-wire fuse (L+) 4000 mA -T- slow-blow (high inrush load!)
L- / 2	BU	1.5mm <sup>2</sup> , stranded wire	0 V DC / GND	
PE	YE/GN	1.5mm <sup>2</sup> , stranded wire	PE	

Tab. 5-7 Recommendation for fusing

### 5.3.5 Plug assignment (RJ45)

The data transfer of the ExCam IPQ1715 series uses a 100 Mbit/s Ethernet connection (100BASE-TX).

If the cable termination uses a plug, the latter should be plugged into the RJ45 PoE slot of the network device (PSE). Prior to connecting it to the camera, the network device (PSE) can already be supplied with power, hence there is no „power ON“ priority which has to be observed.



**Attention!**

**Use appropriate RJ45 plugs! Check the cable shielding, cross-section and the outside diameter!**



**Attention!**

**It is imperative to ensure a correct routing of the individual wires according to the “EIA/TIA-568B”**



**Attention!**

**Finally, check your network installation by per Class-D Link Test.**

Detailed instructions on how to connect an RJ45 plug are available in our video tutorial: “SAMCON 03 Mounting and installing the RJ45 jack to SAMCON cables” <https://go.samcon.eu/v03>



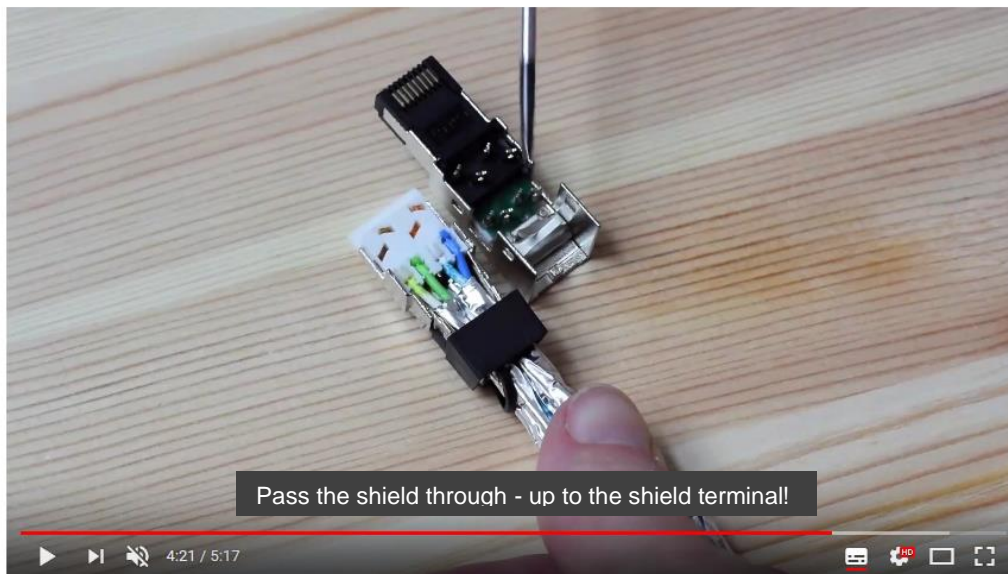


Fig. 5-12 Plug assignment, RJ45

### 5.3.6 Tests prior to switching on voltage



**Attention!**

**Prior to starting the device, perform all tests as indicated by the national regulations. Furthermore, check the correct function and installation of the device in accordance with this user manual and other applicable regulations.**



**Attention!**

**Incorrect installation and operation of the camera may lead to a loss of warranty!**



**Attention!**

**Do not switch on the camera at temperatures below 0°C!**

## 6 Working inside the camera housing (Ex-d)

The customer may open the housing only if it is absolutely necessary. Only exchanging the SD memory card or a hardware reset are reasons for this.

### 6.1 Work preparation



**Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**



**Attention!**

**Depending on classification of hazard areas, a work approval has to be obtained.**

**If you adjust the camera yourself or open the pressure-resistant enclosure (Ex-d) under voltage, it is absolutely imperative to prevent potentially explosive atmosphere!**

### 6.2 Opening the pressure-resistant housing



**„WARNING – MAY NOT BE OPENED IN HAZARD AREAS“**

**Note: Depending on classification of hazard areas, a work approval has to be obtained.**

**Even after switching on the power supply, it is absolutely imperative to avoid potentially explosive atmosphere when opening the camera housing. Opening the housing requires disassembly and working in a safe (i.e. non-explosive!) area.**



**Attention!**

**Heed that you do not damage the thread surface of the flame-proof gap.**



**Attention!**

**Heed that you do not damage the housing seals. Keep them clean!**

If the ExCam IPQ1715 is equipped with a weather protection roof this has to be removed prior to starting your work. To do so, loosen the 4x8mm lens screws M4\*0.7 at the front and rear sides of the bracket holders (Figure 6-1).

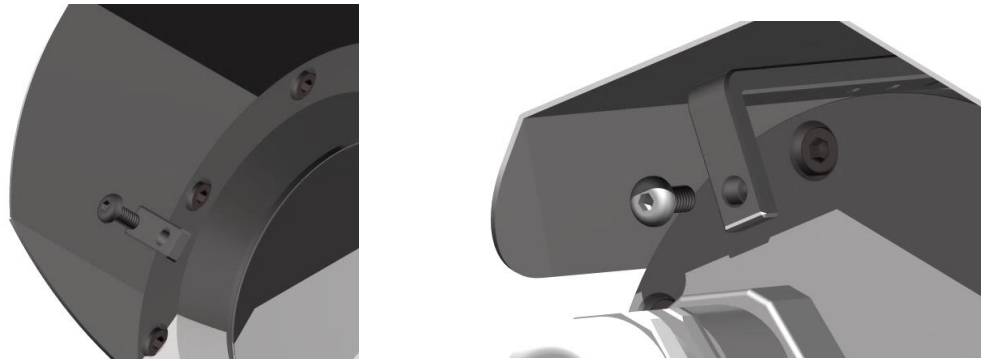


Fig. 6-1 Removing the weather protection roof (1/2) (this illustration is an example)

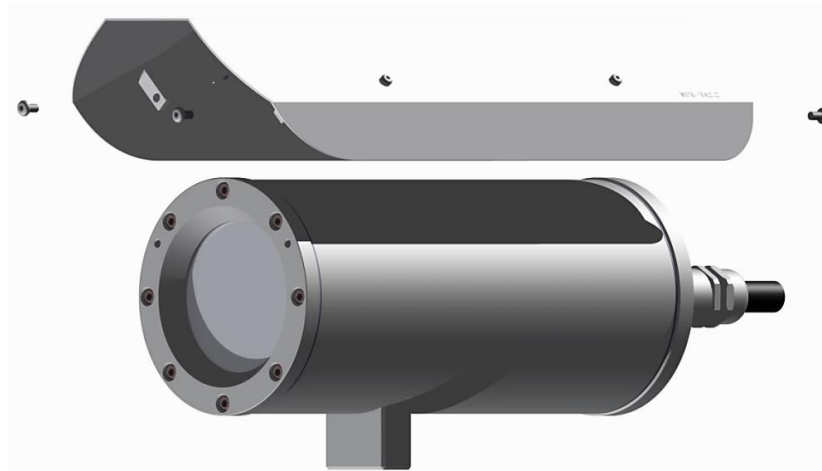


Fig. 6-2 Removing the weather protection roof (2/2) (similar illustration)

To open the stainless steel housing (T07 VA2.2.x.x) of the ExCam IPQ1715, loosen the eight cylinder-head hexagon screws (DIN 912/ ISO 4762) together with their spring rings (DIN 127A) on the rear side of the cable and power supply flange (see Figure 6-3). Caution: do not touch the screw threads with your skin or clothes! On the threads, there is LOC-TITE® 243™ (chemical basis is dimethacrylate ester) applied to prevent the bolted connection from unintentional loosening because of impacts and vibrations and to seal them tightly. It is not permitted for the customer to open the front-side sight glass flange! There is no need of such an action.

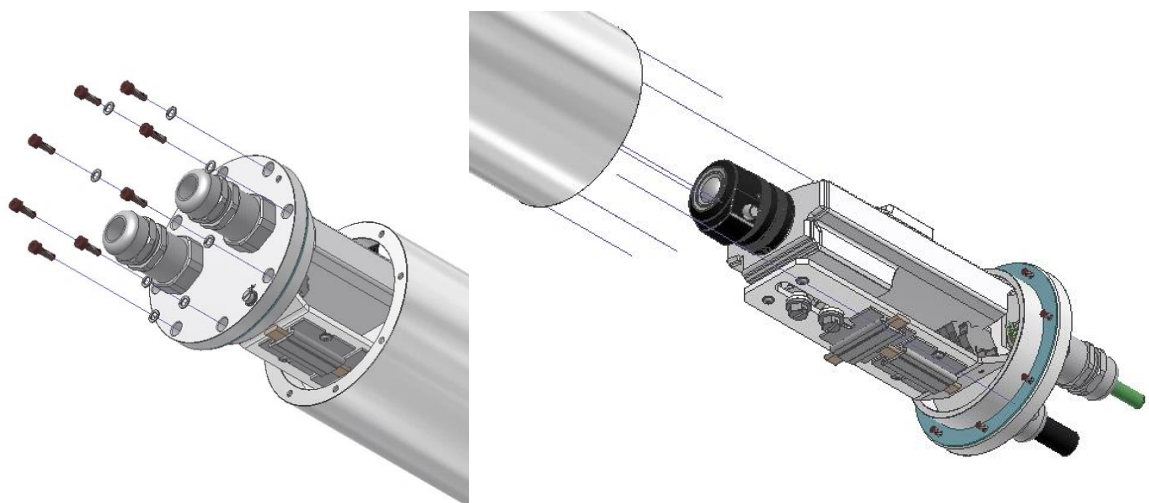


Fig. 6-3 Opening the ExCam IPQ1715 (similar illustration)

Carefully pull out the cable and supply flange to the rear, as straight as possible. Because of negative pressure, it may be difficult to remove the flange. The cylindrical clearance fit (H8f7 - DIN ISO 286) of the camera body and flange may not be tilted! Risk of damage to the flame-proof gap (DIN EN 60079-1:2012)!

Attention: The mounting adapter with the housing's PTC heater, the camera module and the optics, as well as the temperature control, and (if applicable) auxiliary relays and terminal blocks are fixed to the cable and supply flange. Again, any work has to be carried out very carefully and precisely in order to avoid tilting and damaging the installed components! Caution: do not touch the cylindrical fit surface with your skin or clothes! On the surface, there is oil lubricating paste to protect the surface against fretting corrosion and mechanical stresses.

When you open the housing, pay attention that you do not damage or pollute the GYLON® flat seal (blue, RAL5012)! The flat gasket is loosely attached to the cable and power supply flange. It is fixed only by the bolted connections!



**Attention!**

**Make sure not to damage the surface of the drill hole and the shaft (fitting) of the flame-proof gap.**



**Attention!**

**Pay attention not to damage the seals. Keep them clean!**

### 6.3 Removing/inserting an SD memory card

Note:

The ExCam IPQ1715 has a slot for a micro SDHC memory card. Saved video files can be played and deleted via the web interface. They are also available in a download list. Moreover, the videos available in the memory card can also be accessed via FTP server in the network. If the memory card has to be replaced by the user, it should be, as far as possible, empty and pre-formatted with an ext4 or vFAT file system.



**When touching electrical components, observe potential equalization (grounding of the body): carry electrostatic-discharge clothes, a PE wristband etc.!**

## 6.4 Hardware Reset

To re-set all parameters of the ExCam IPQ1715 (including the IP address) to default setting, a hardware reset has to be carried out.

The parameters can be reset via the web interface or manually. If within the network, the camera can no longer be reached or if it is in an uncontrollable state, the reset should be performed manually. To do so, proceed as follows:

1. Disconnect the camera installation module (Axis Q1715) from the power supply.
2. Press and hold the control button (see the illustration below) and, at the same time, connect the system to the voltage supply (PoE).
3. Hold the control button pressed for about 30 seconds.
4. Release the control button. After about a minute, the AXIS Q1715 will return to factory default settings. If there is a DHCP server available in the network, the IP address will be the following: 192.168.0.90 (subnet masking 255.255.255.0).
5. IP address and password can be redefined. If the hardware reset is not satisfactory or the network camera shows serious conflicts or does not work as usual (errors in the browser visualisation, frozen images, control commands no longer processed, slowing down of the system , etc.), it may be necessary to re-install the current firmware, or to install an update (see Chapter 7).


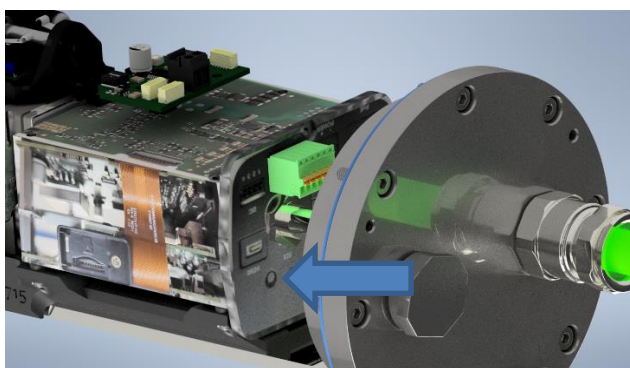


Fig. 6-4 Reset Button

## 6.5 Closing the pressure-resistant housing

For closing the housing, proceed in reverse order as when opening. Use exclusively original screws included in the supply.

The cable and power-supply flange (K1) is fixed by 8 cylinder-head screws M4\*0.7 (ISO metric right-turning) with 30 mm thread length (DIN 912/ ISO 4762, grade 6g). Materials of bolted connections are identical to the pressure-resistant stainless steel housing (standard material no. 1.4404 AISI316L). Check whether the threaded holes are undamaged and clean. Before closing, it is also absolutely imperative to check the flame-proof gap (circular cylindrical fit).

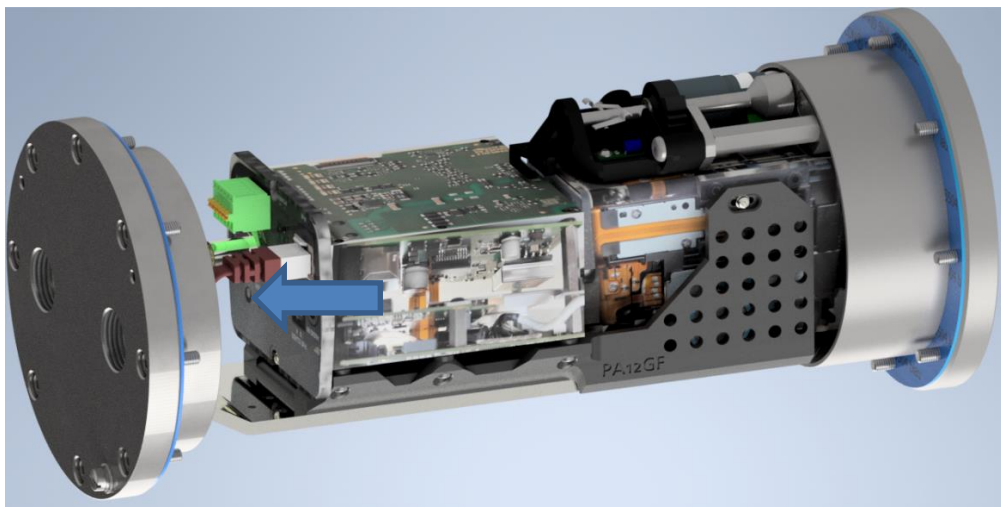

**Attention!**

**If any mechanical damages occurred to the fitting gap, it is no longer allowed to use the housing!**



**Attention!**

**Do not lock-in any foreign objects in the housing.**

Dismantled screw locks (spring washers DIN 127A) must be used again.

The GYLON® gasket must be used in undamaged condition, according to the flange drilling hole pattern, and placed between the flange and body. The lateral position of the flat surface/contact surface is arbitrary.

If, when closing the housing, you see that the surface of the fitting gap is dirty or insufficiently lubricated, clean it with a clean cloth and de-grease it with a suitable cleaning agent. Then re-grease it with lubricant suitable for this specific application (e.g., Molykote® P-40 gel for standard applications or special grease OKS 403 in the event of heavy seawater influence).

The screwed connections of flange and body components must always be tightened *crosswise* at a torque of **3 Nm**! Do not tighten the screw too strongly! It can cause rupture of the cylinder head or over-stretching the threads, and thus to impairment of the pressure resistance or ignition protection class.



**Cylinder-head bolts for explosion-proof connection of the camera body with the flange component must always be tightened at a 3 Nm torque - crosswise and evenly!**

## 6.6 Battery

ExCam IPQ1715 model ...-L.N-... is equipped with a Maxell button cell CR2032H. This cell supplies energy to the internal real time clock (RTC) but is not high temperature resistant. The customer is not allowed to replace the battery! In this case, please contact the manufacturer. For models X.H and X.HH the battery is removed.

## 7 Network access and visualization

The most important procedures of the camera commissioning are described below. The configuration menu of the web surface allows an intuitive navigation and offers several configuration possibilities. For detailed documentation and information how to use the web Interface, please see the Axis User Manual or visit the following website:

<https://www.axis.com/products/axis-q1715/support>



The delivered ExCam IPQ1715 is set to the applicable net frequency (50Hz or 60Hz). If the camera is used at a location with a differing net frequency, a flickering of the picture might be noticeable, particularly in surroundings with fluorescent tubes. In such a case, the applicable settings have to be carried out within the menu “System Options > Advanced > Plain Config”.

User: root  
Password: root

### 7.1 Browser Support

A list of the currently supported web browsers, operating systems, required add-ons, etc. can be viewed at:

<https://help.axis.com/de-de/access-your-device>  
<https://www.axis.com/de-de/support>



### 7.2 Assigning the IP address

The ExCam IPQ1715 is intended for use in an Ethernet network and it requires an IP address to access and control it. In the most today's networks, a DHCP server is integrated. This server automatically assigns an IP address.


If there is no DHCP server available in the network, the IP default address of ExCam IPQ1715 is “**192.168.0.90**” (**subnet masking 255.255.255.0**). With the “AXIS IP Utility“ it is possible to determine the IP address under Windows. This software and other useful tools are available free of charge from axis.

<https://www.axis.com/support/tools/axis-ip-utility>



**In case it is not possible to assign the IP address, it might be necessary to change the firewall settings!**

The "AXIS IP Utility" tool automatically recognizes all ExCam devices and displays them in the device list. It can also be used to manually assign a static IP address. For this purpose, the ExCam IPQ1715 network camera has to be installed in the same physical network segment (physical subnet) as the computer on which the AXIS IP Utility is running. The network signature of ExCam IPQ1715 is "AXIS Q1715" (see Figure 7-1). MAC address and serial number for clear device identification are also detected and displayed.

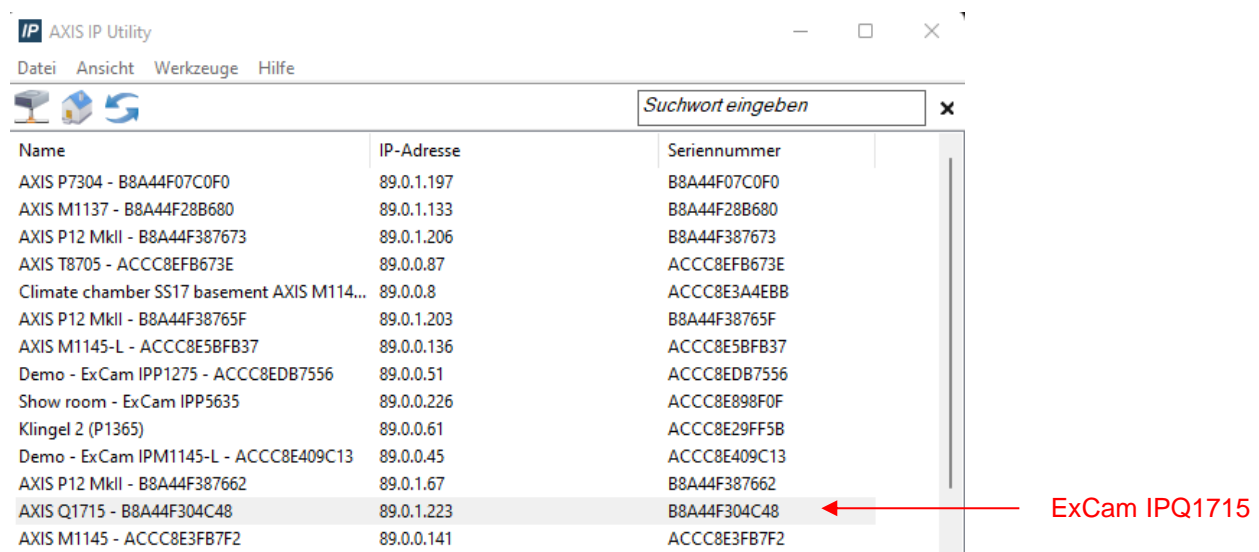

Name	IP-Adresse	Seriennummer
AXIS P7304 - B8A44F07C0F0	89.0.1.197	B8A44F07C0F0
AXIS M1137 - B8A44F28B680	89.0.1.133	B8A44F28B680
AXIS P12 MklI - B8A44F387673	89.0.1.206	B8A44F387673
AXIS T8705 - ACCC8EFB673E	89.0.0.87	ACCC8EFB673E
Climate chamber SS17 basement AXIS M114...	89.0.0.8	ACCC8E3A4EBB
AXIS P12 MklI - B8A44F38765F	89.0.1.203	B8A44F38765F
AXIS M1145-L - ACCC8E58FB37	89.0.0.136	ACCC8E58FB37
Demo - ExCam IPP1275 - ACCC8EDB7556	89.0.0.51	ACCC8EDB7556
Show room - ExCam IPP5635	89.0.0.226	ACCC8E898F0F
Klingel 2 (P1365)	89.0.0.61	ACCC8E29FF5B
Demo - ExCam IPM1145-L - ACCC8E409C13	89.0.0.45	ACCC8E409C13
AXIS P12 MklI - B8A44F387662	89.0.1.67	B8A44F387662
<b>AXIS Q1715 - B8A44F304C48</b>	<b>89.0.1.223</b>	<b>B8A44F304C48</b>
AXIS M1145 - ACCC8E3FB7F2	89.0.0.141	ACCC8E3FB7F2

Fig. 7-1 Axis IP Utility

### 7.3 Password/ Identification

The following user name is set at the factory: **root**

The following password is set at the factory: **root**



## **8 Maintenance/ Modification**

The applicable regulations for the maintenance and servicing of electrical devices in potentially explosive atmospheres must be adhered to.

The required maintenance intervals are specific to the individual devices. The operating company has to determine these intervals depending on the application parameters. The maintenance tasks especially include examination of parts on which the ignition protection depends (e.g., proper condition of the casing, seals and cable entry points). If maintenance measures are necessary they have to be initiated and/or executed.

### **8.1 Repair and correction**

Repairs may only be carried out with original parts of SAMCON Prozessleittechnik GmbH. Damaged pressure-resistant housings have to be replaced completely. If in doubt, send the part in question back to SAMCON Prozessleittechnik GmbH.

Repairs concerning the explosion protection must only be carried out in accordance with nationally applied regulations by SAMCON Prozessleittechnik GmbH or by an electrical technician authorised by SAMCON Prozessleittechnik GmbH. Rebuilding of or alterations to the devices are not permitted.

## **9 Disposal/ Recycling**


When disposing of the device, nationally applicable regulations must be observed.

This Document is subject to alterations and additions.

## 10 Drawings & 3D models, Certificates and further documentation

All drawings, 3D models, certificates and other information are available in the download area of the product page on our website:

<https://www.samcon.eu/en/products/network/excam-ipq1715/>

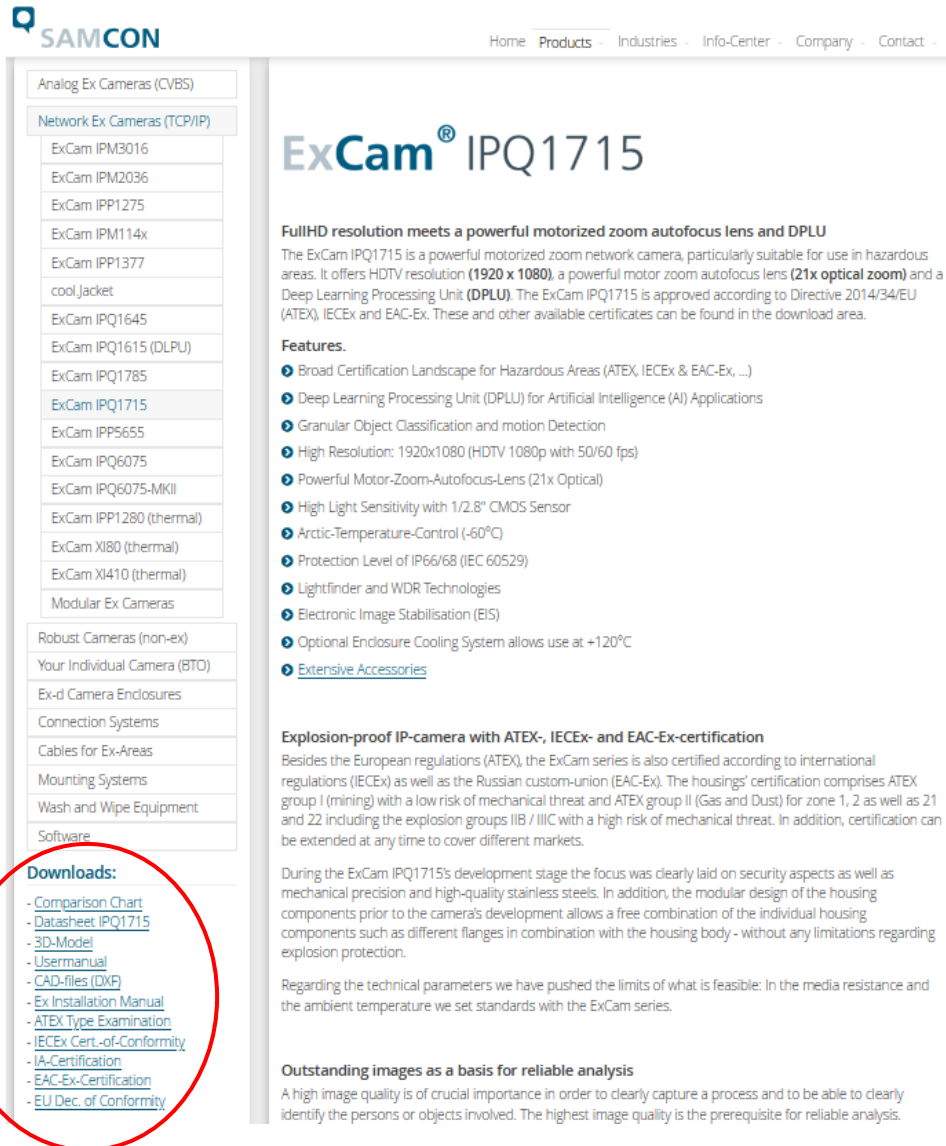

**SAMCON** Home Products - Industries - Info-Center - Company - Contact -

Analog Ex Cameras (CVBS)

Network Ex Cameras (TCP/IP)

- ExCam IPM3016
- ExCam IPM2036
- ExCam IPP1275
- ExCam IPM114x
- ExCam IPP1377
- coolJacket
- ExCam IPQ1645
- ExCam IPQ1615 (DPLU)
- ExCam IPQ1785
- ExCam IPQ1715
- ExCam IPP5655
- ExCam IPQ6075
- ExCam IPQ6075-MKII
- ExCam IPP1280 (thermal)
- ExCam XI80 (thermal)
- ExCam XI410 (thermal)
- Modular Ex Cameras

Robust Cameras (non-ex)

Your Individual Camera (BTO)

Ex-d Camera Enclosures

Connection Systems

Cables for Ex-Areas

Mounting Systems

Wash and Wipe Equipment

Software

**Downloads:**

- [Comparison Chart](#)
- [Datasheet IPQ1715](#)
- [3D-Model](#)
- [Usermanual](#)
- [CAD-files \(DXF\)](#)
- [Ex Installation Manual](#)
- [ATEX Type Examination](#)
- [IECEX Cert.-of-Conformity](#)
- [IA-Certification](#)
- [EAC-Ex-Certification](#)
- [EU Dec. of Conformity](#)

## ExCam® IPQ1715

**FullHD resolution meets a powerful motorized zoom autofocus lens and DPLU**

The ExCam IPQ1715 is a powerful motorized zoom network camera, particularly suitable for use in hazardous areas. It offers HDTV resolution (**1920 x 1080**), a powerful motor zoom autofocus lens (**21x optical zoom**) and a Deep Learning Processing Unit (**DPLU**). The ExCam IPQ1715 is approved according to Directive 2014/34/EU (ATEX), IECEx and EAC-Ex. These and other available certificates can be found in the download area.

**Features.**

- ➊ Broad Certification Landscape for Hazardous Areas (ATEX, IECEx & EAC-Ex, ...)
- ➋ Deep Learning Processing Unit (DPLU) for Artificial Intelligence (AI) Applications
- ➌ Granular Object Classification and motion Detection
- ➍ High Resolution: 1920x1080 (HDTV 1080p with 50/60 fps)
- ➎ Powerful Motor-Zoom-Autofocus-Lens (21x Optical)
- ➏ High Light Sensitivity with 1/2.8" CMOS Sensor
- ➐ Arctic-Temperature-Control (-60°C)
- ➑ Protection Level of IP66/68 (IEC 60529)
- ➒ Lightfinder and WDR Technologies
- ➓ Electronic Image Stabilisation (EIS)
- ➔ Optional Enclosure Cooling System allows use at +120°C
- ➕ [Extensive Accessories](#)

**Explosion-proof IP-camera with ATEX-, IECEx- and EAC-Ex-certification**

Besides the European regulations (ATEX), the ExCam series is also certified according to international regulations (IECEX) as well as the Russian custom-union (EAC-Ex). The housings' certification comprises ATEX group I (mining) with a low risk of mechanical threat and ATEX group II (Gas and Dust) for zone 1, 2 as well as 21 and 22 including the explosion groups IIB / IIIC with a high risk of mechanical threat. In addition, certification can be extended at any time to cover different markets.

During the ExCam IPQ1715's development stage the focus was clearly laid on security aspects as well as mechanical precision and high-quality stainless steels. In addition, the modular design of the housing components prior to the camera's development allows a free combination of the individual housing components such as different flanges in combination with the housing body - without any limitations regarding explosion protection.

Regarding the technical parameters we have pushed the limits of what is feasible: In the media resistance and the ambient temperature we set standards with the ExCam series.

**Outstanding images as a basis for reliable analysis**

A high image quality is of crucial importance in order to clearly capture a process and to be able to clearly identify the persons or objects involved. The highest image quality is the prerequisite for reliable analysis.

If you wish additional technical information, please contact us at:

[support@samcon.eu](mailto:support@samcon.eu)

## 11 Notes



**SAMCON**

Schillerstrasse 17, 35102 Lohra-Altenvers,  
Germany

[www.samcon.eu](http://www.samcon.eu), [info@samcon.eu](mailto:info@samcon.eu)

Phone: +49 6426 9231-0, fax: - 31

