Wall Mount XPT Bugfix Exchange


product:	WMB EXCAM XPT
author:	S. Weber
date:	Oct. 13, 2026
doc ID:	261013-PT95MA-SW-Wall Mount XPT Bugfix Excange_rev.00.idw
Passing:	Digital unterschrieben von Roger Thoms Datum: 2026.10.13 16:28:50 +02'00'



INTRO





What you need:	
Wrench	13mm
Allen wrench	3mm
Tourque, Allen -wrench	13mm 3mm

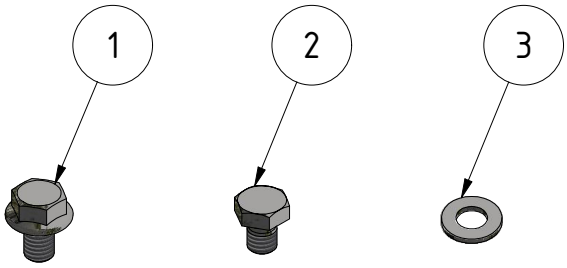

ATTENTION:
Please be careful when working at heights !



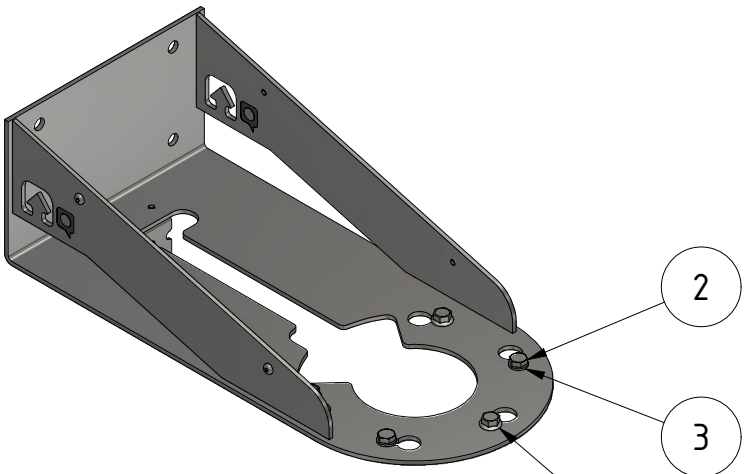

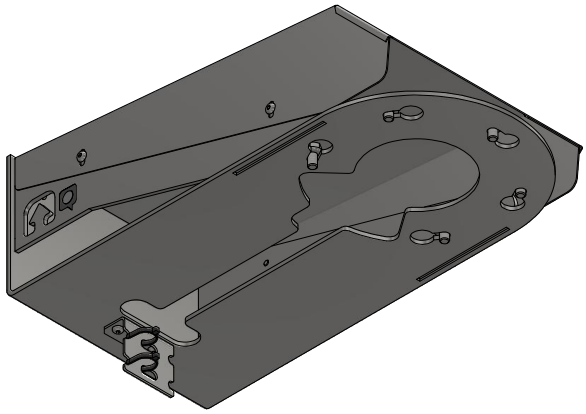



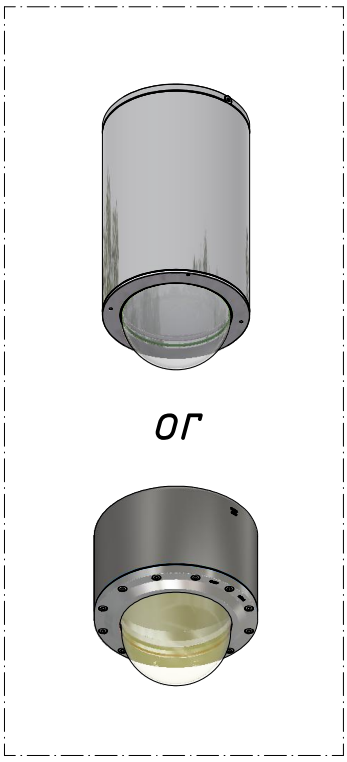



Table of content			
obj.	qty.	part	material
1	3	Threaded bolt DIN 6921 - M8 x 10	stainless steel
2	3	Threaded bolt DIN 933 - M8 x 10	stainless steel
3	3	Washer DIN 125 - A 8,4	stainless steel

1

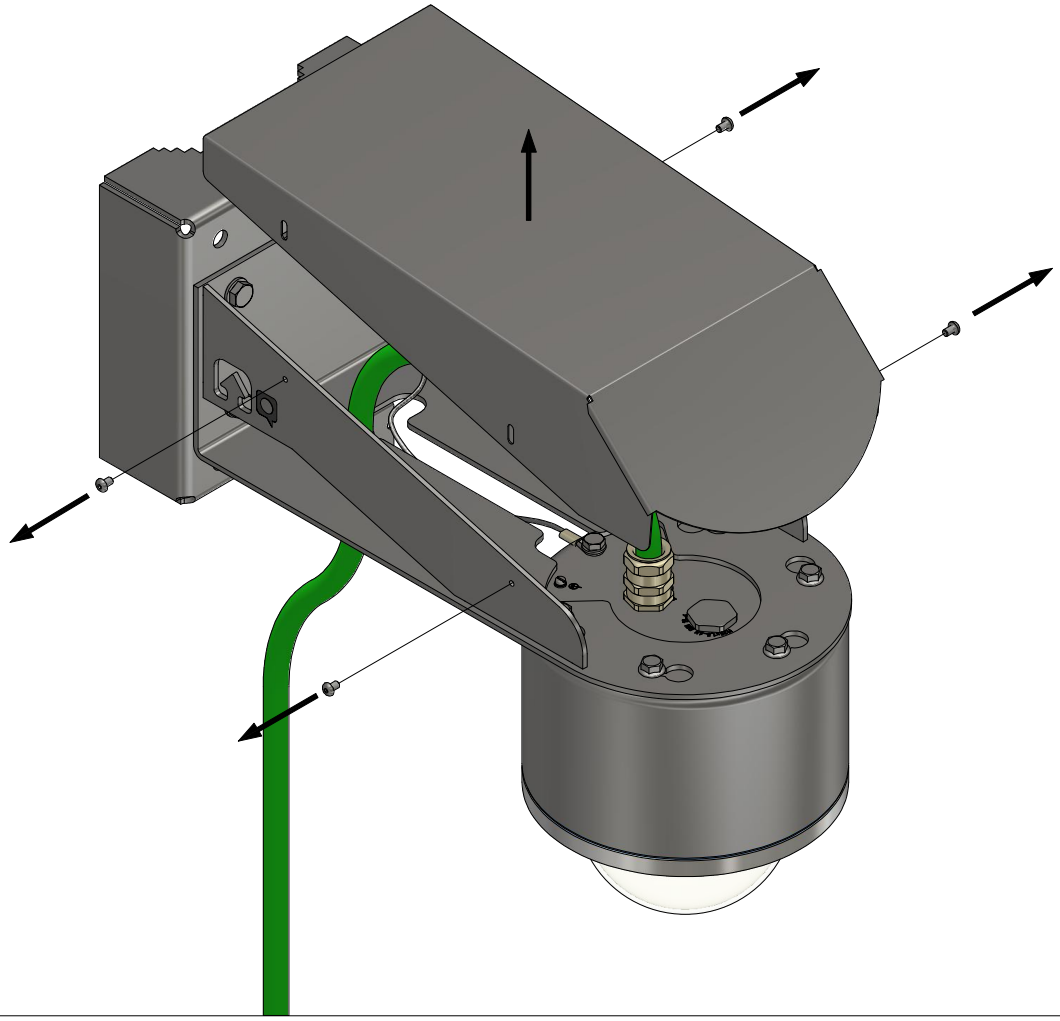


2

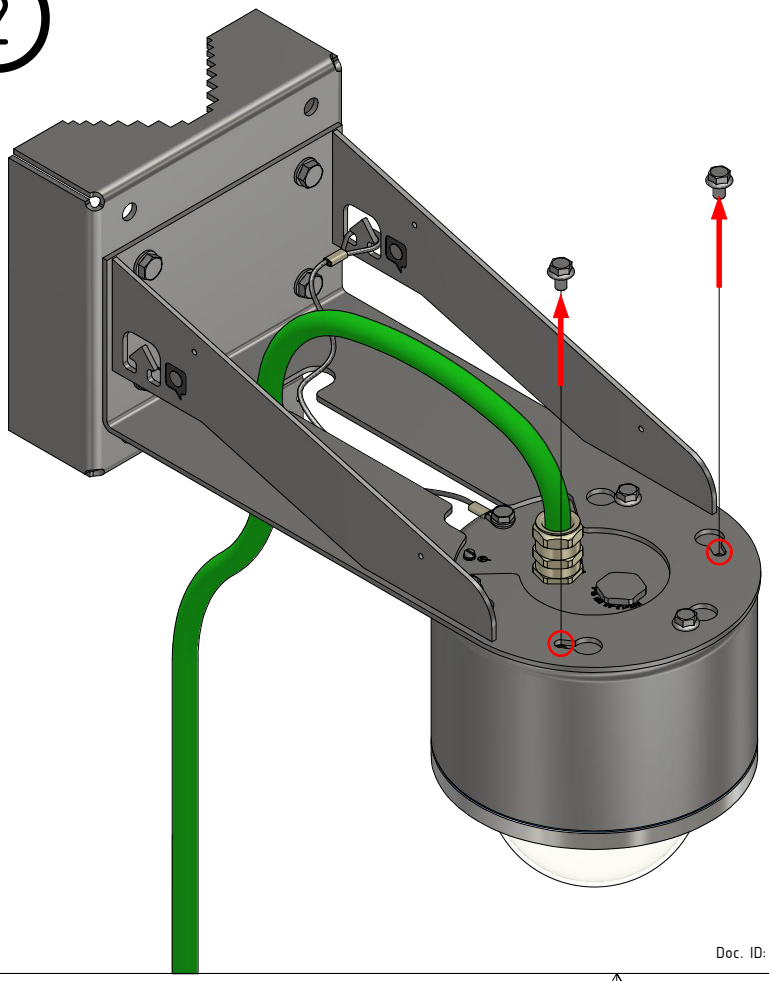


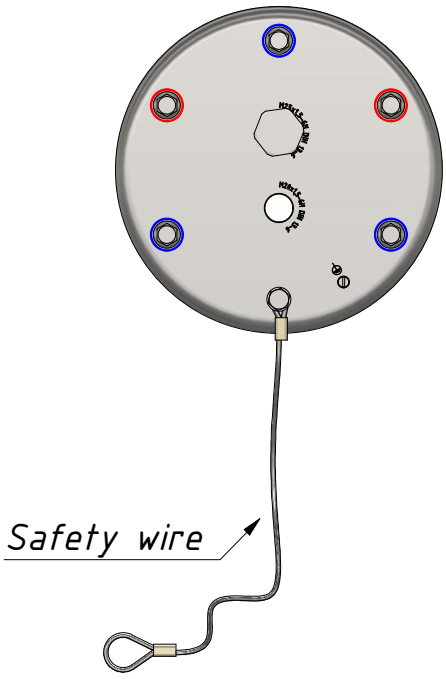


3

Put in threaded bolts DIN 933 (Pos. 2), washer DIN 125 (Pos. 3) in the exact holes, like shown in red!

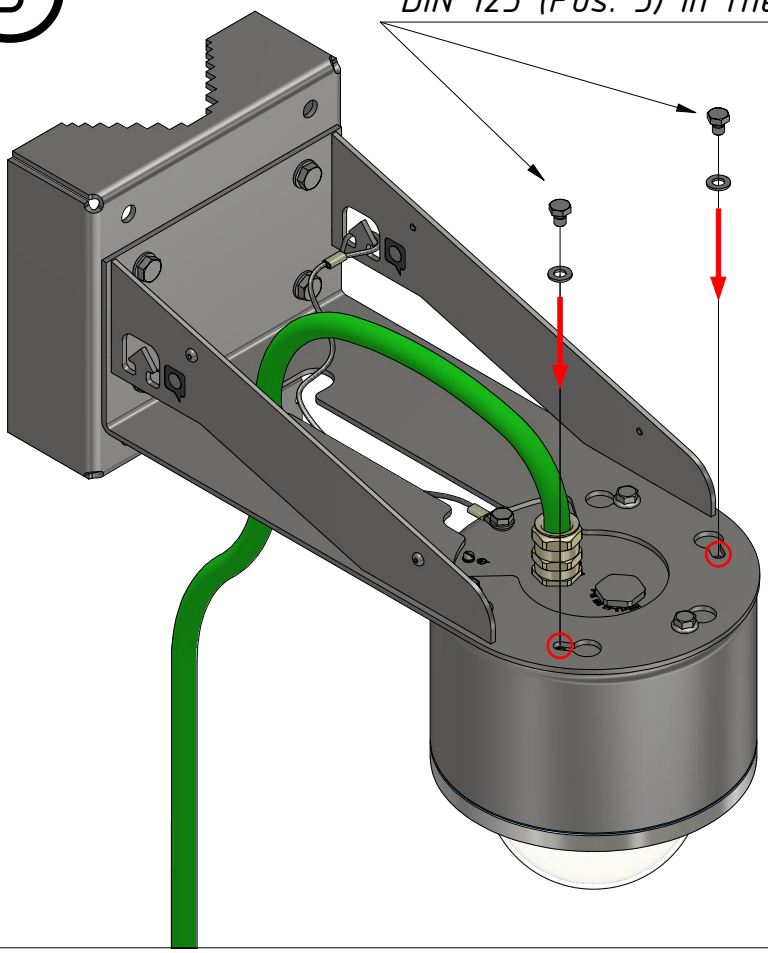

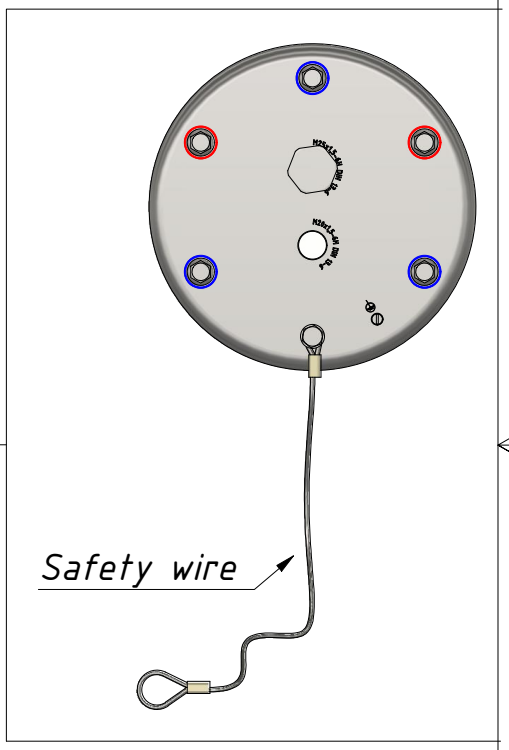



4

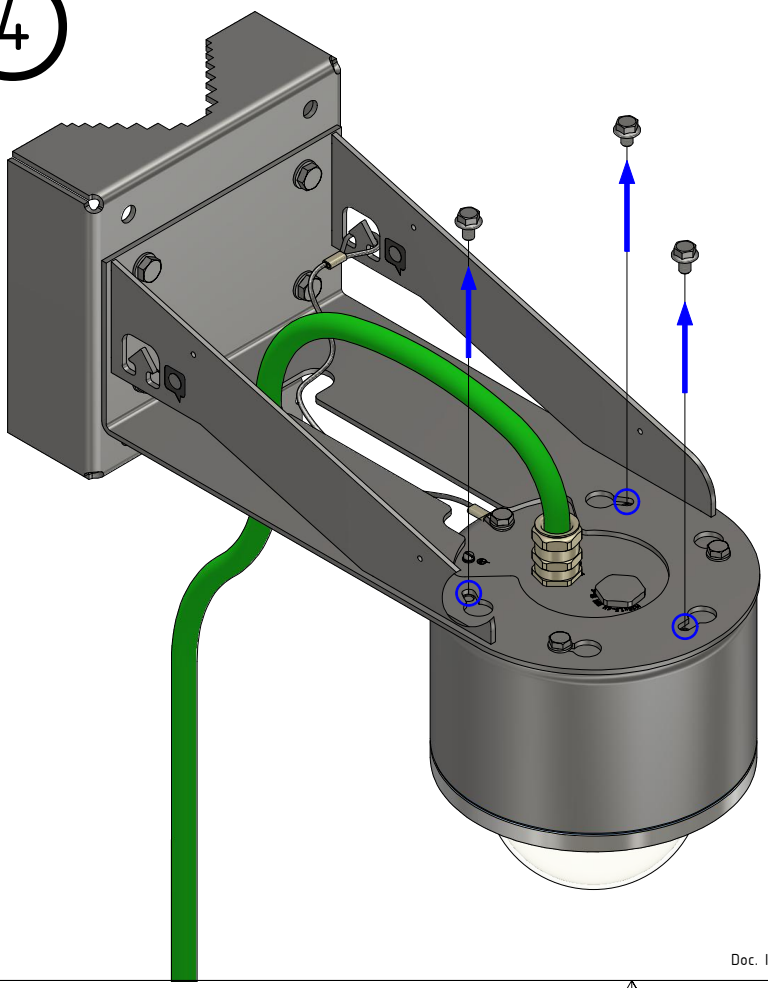


5

Put in threaded bolts DIN 6921 (Pos. 4) in the exact holes, like shown in blue!

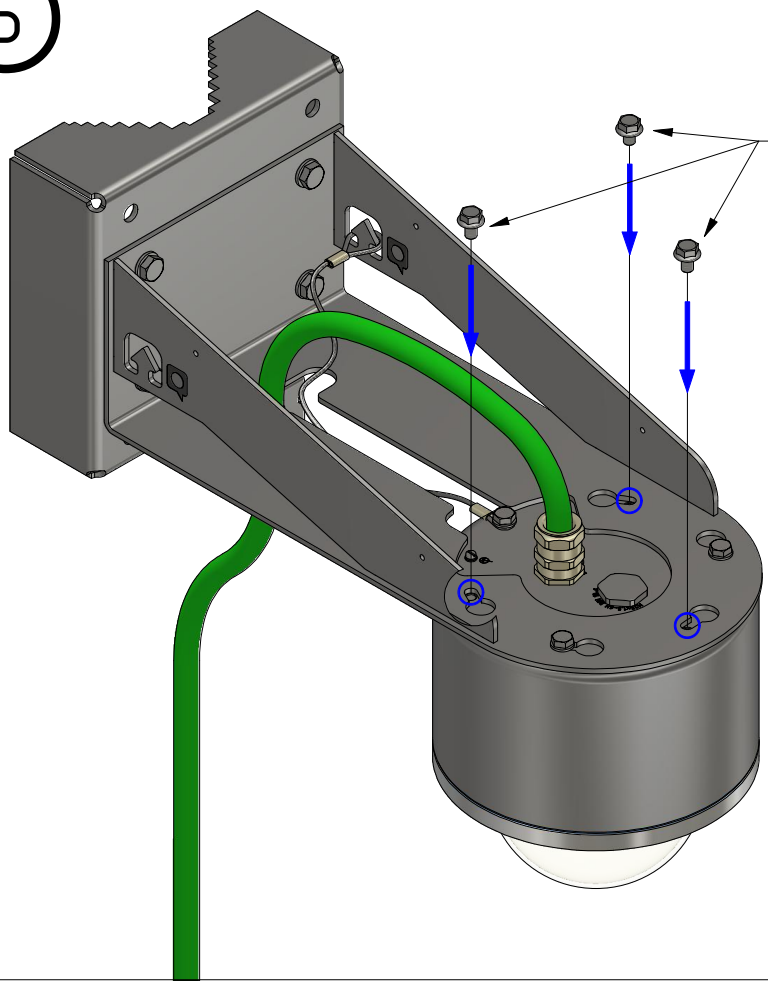


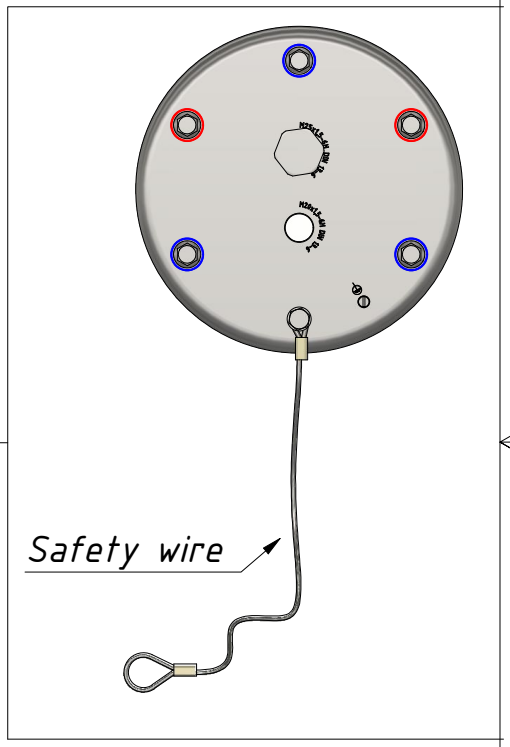


6

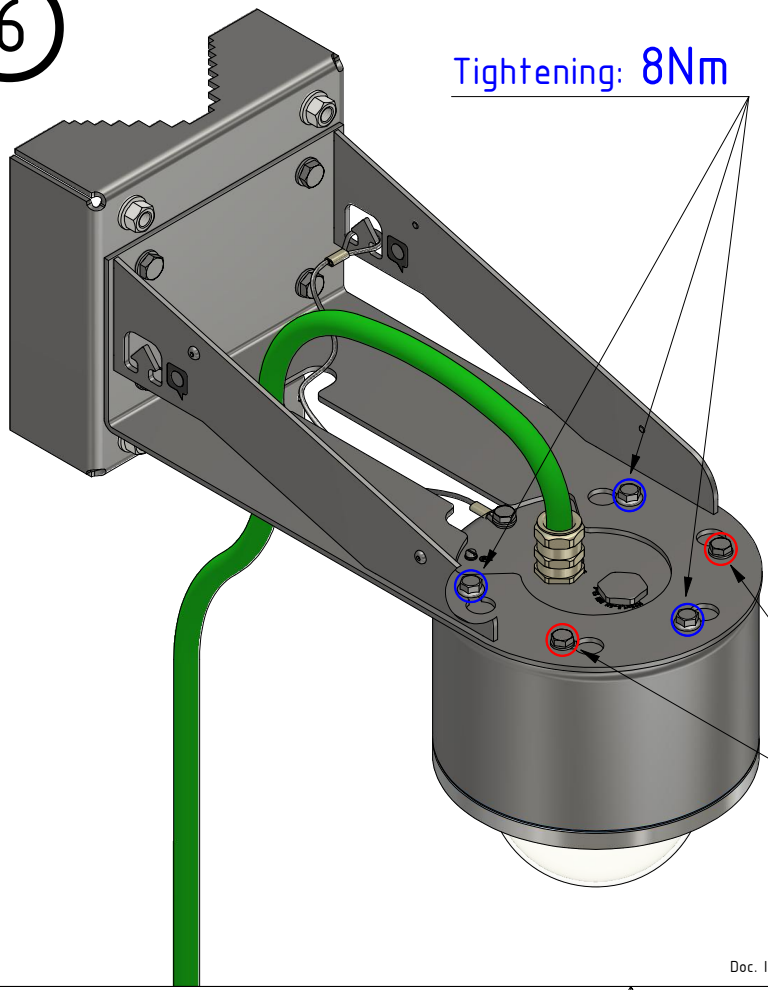

7

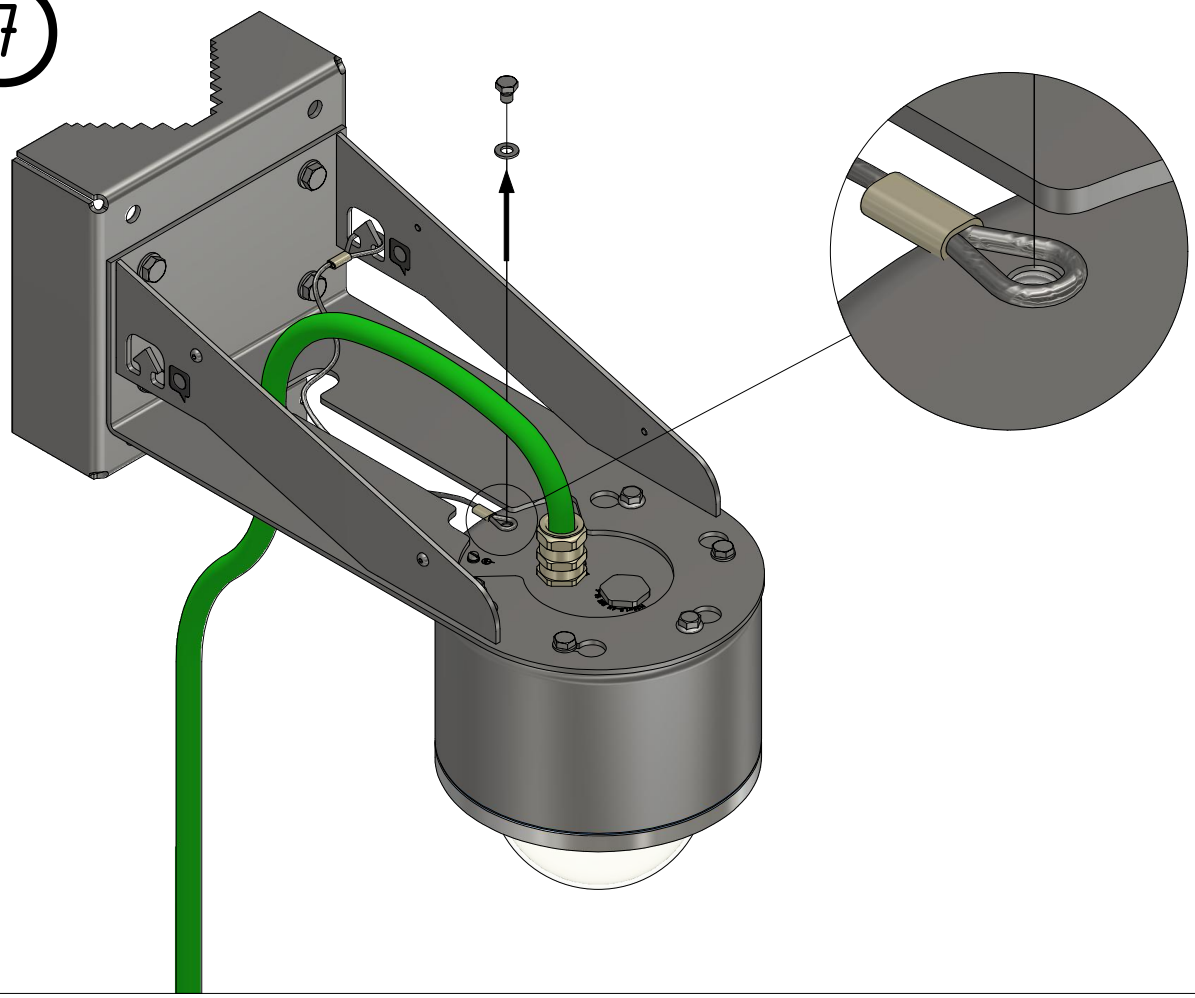


8

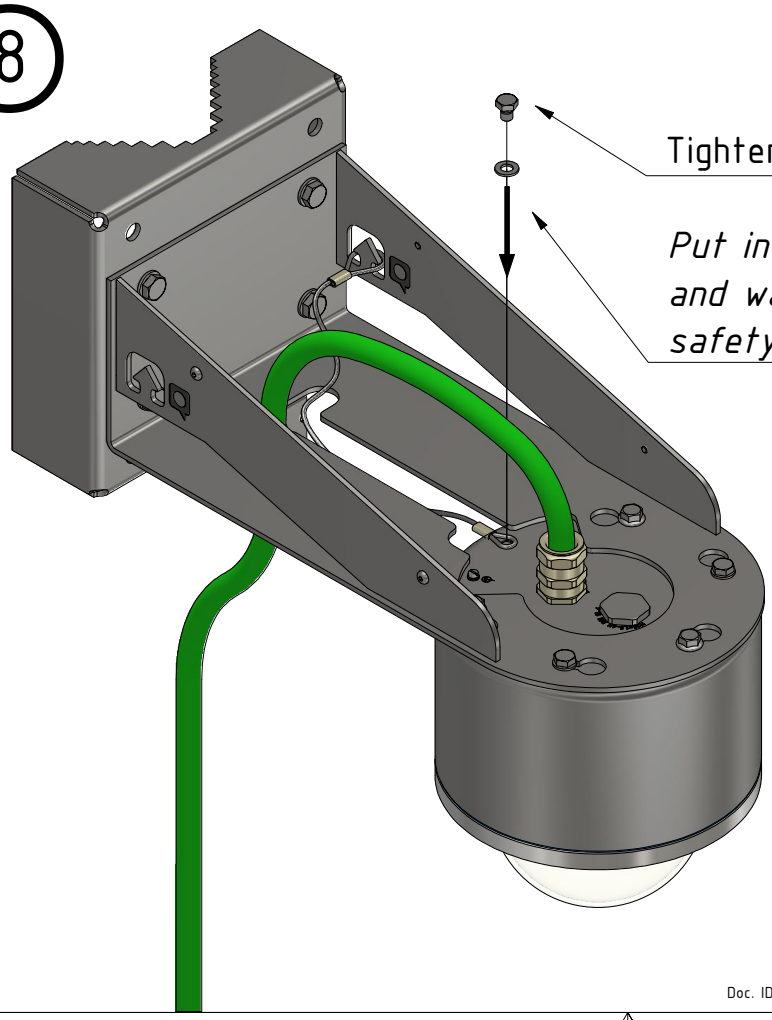


Tightening: 12Nm

Put in threaded bolt DIN 933 (Pos. 2) and washer DIN 125 (Pos. 3) in the safety wire thread hole, like shown!

9

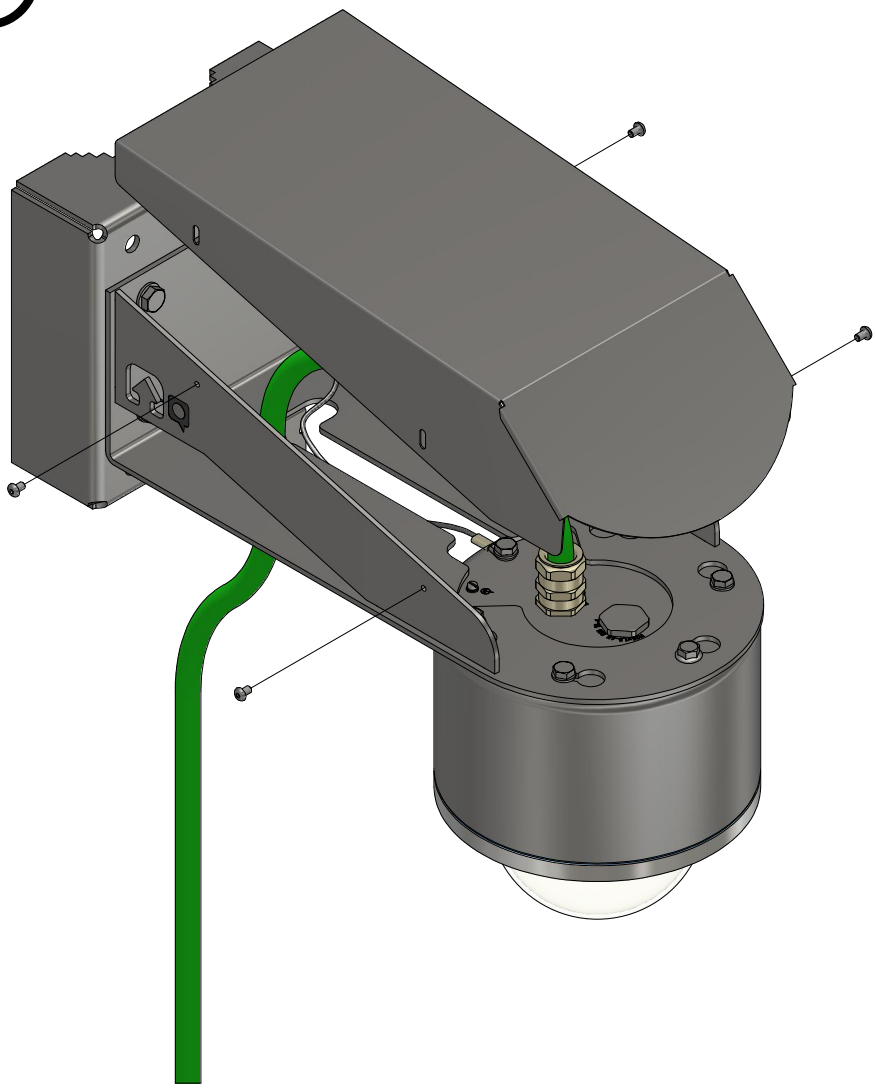

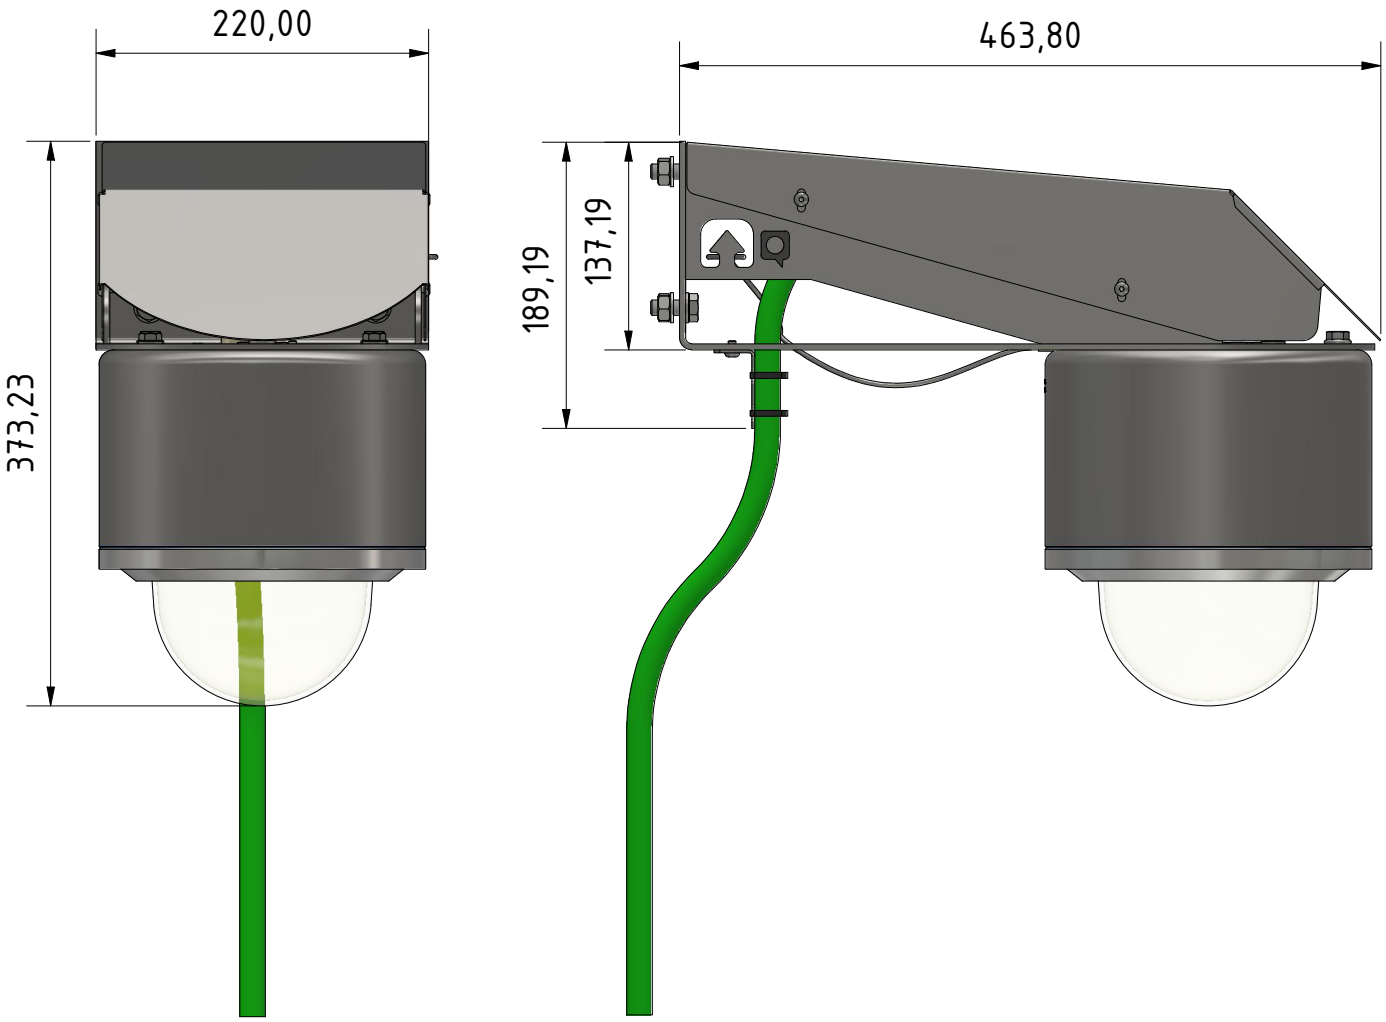

Wiring in accordance to
DIN EN 60079-14:2014 *(IEC 60079-14:2013)* !

Note:
For more information see
other assambly instructions!

Notes:

Notes:

Notes:


SAMCON
Prozessleittechnik GmbH


AXIS
COMMUNICATIONS